

# Reader

## CR20E



- Read 125K proximity card number, USB interface

## CR20M



- Read 13.56MHz mifare card number, USB interface

## CR20MW



- Read and write 13.56MHz mifare card, USB interface

## CR10E



- Read 125K proximity card number, USB interface

## CR10M



- Read 13.56MHz mifare card number, USB interface

## CR10MW



- Read and write 13.56MHz mifare card, USB interface

## ZK4500



- USB interface
- Capture fingerprint template for Central management

## ZK8500R



- USB interface
- Capture fingerprint template and read ID/MF card serial number for Central management

## PT100/MT100 Dock



- Charging/Acquisition Base for PT100/MT100

