


Quick Start Guide

SpeedFace series


Version: 1.0

Date: October 2018

Overview

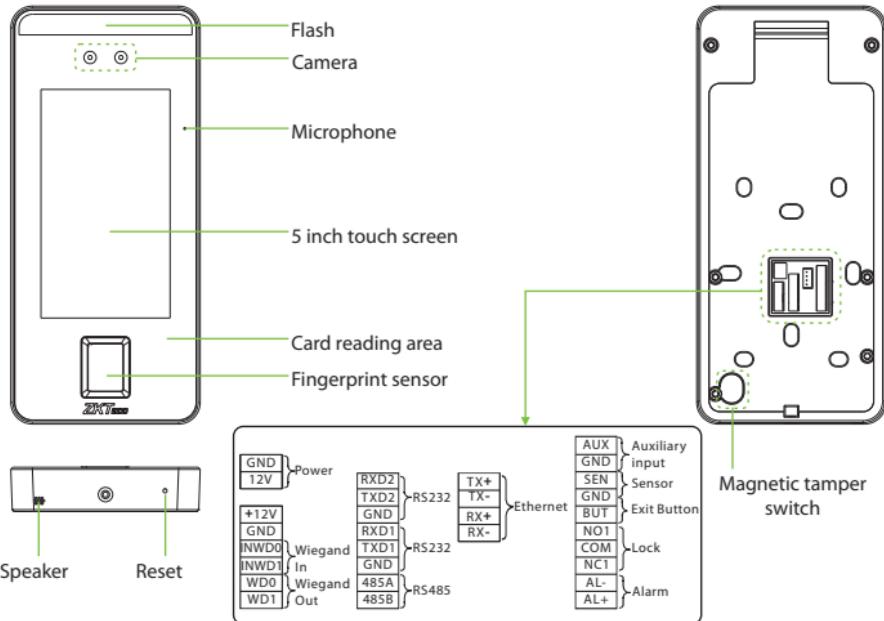


Device Installation

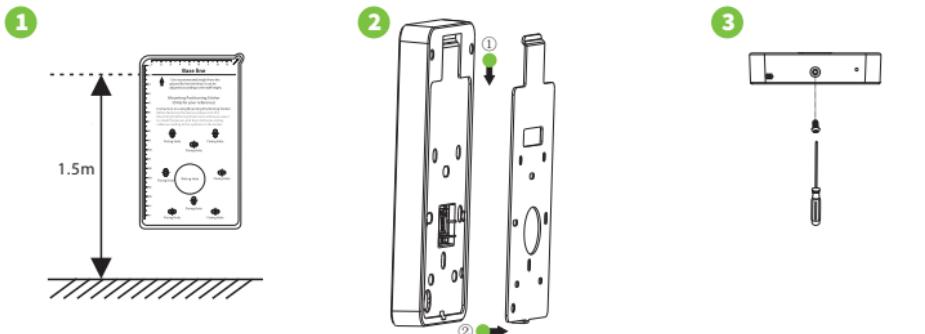


- ① Attach the mounting template sticker to the wall, and drill holes according to the mounting paper. Fix the back plate on the wall using wall mounting screws.
- ② Attach the device to the back plate.
- ③ Fasten the device to the back plate with a security screw.

Standalone Installation

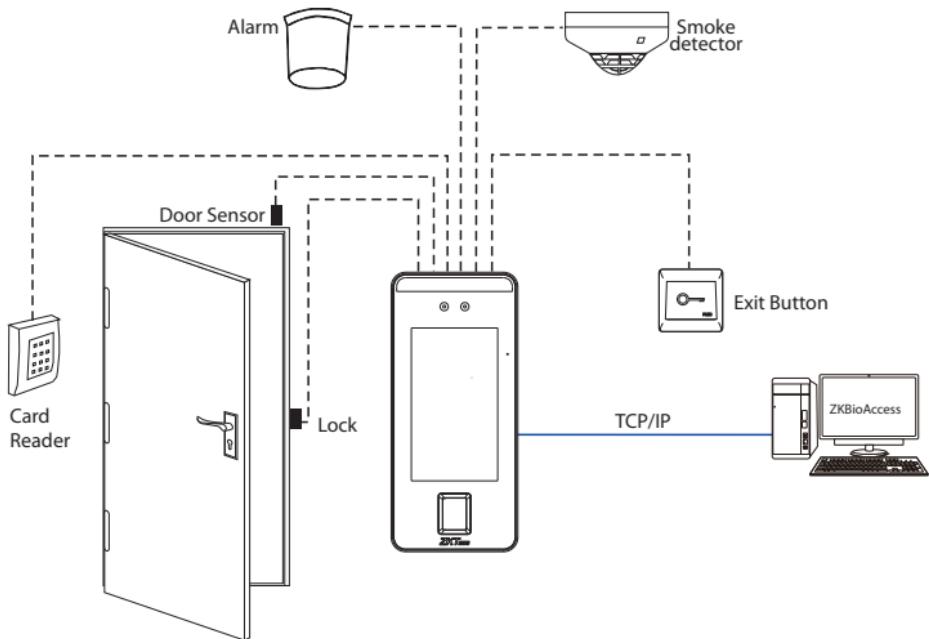

Note: In this document, we only guide you to connect some common components, if you want more guidance on connection of SRB, external fingerprint reader and so on, please refer to user manual document.

Door Sensor, Exit Button & Alarm Connection

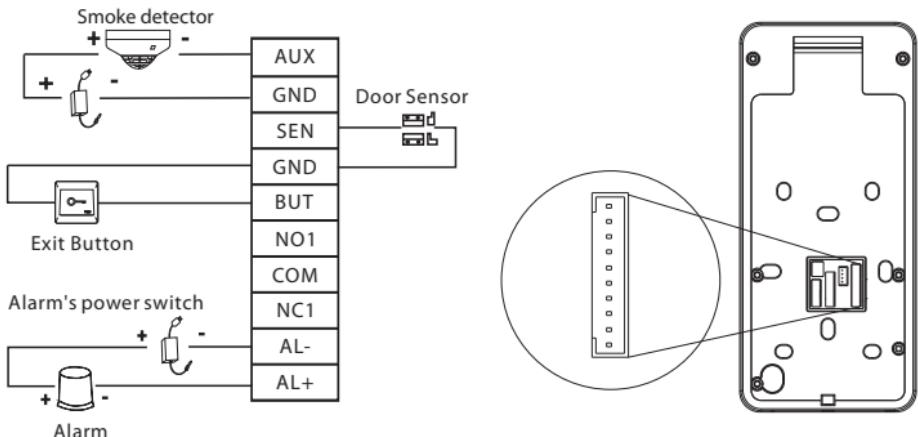


Lock Relay Connection


The system supports Normally Opened Lock and Normally Closed Lock.

The NO LOCK (normally opened at power on) is connected with 'NO1' and 'COM' terminals, and the NC LOCK (normally closed at power on) is connected with 'NC1' and 'COM' terminals. Take NC Lock as an example below:


1) Device not sharing power with the lock

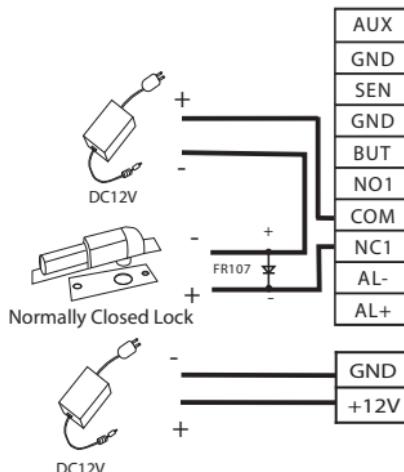


2) Device sharing power with the lock

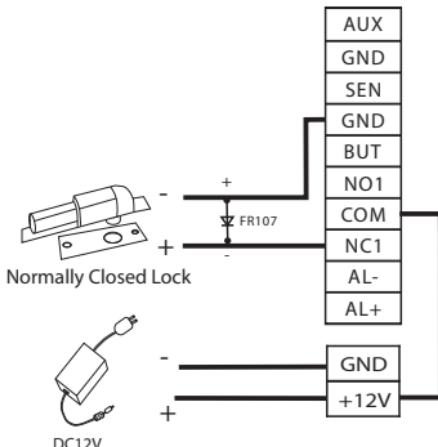


RS485 and RS232 Connection

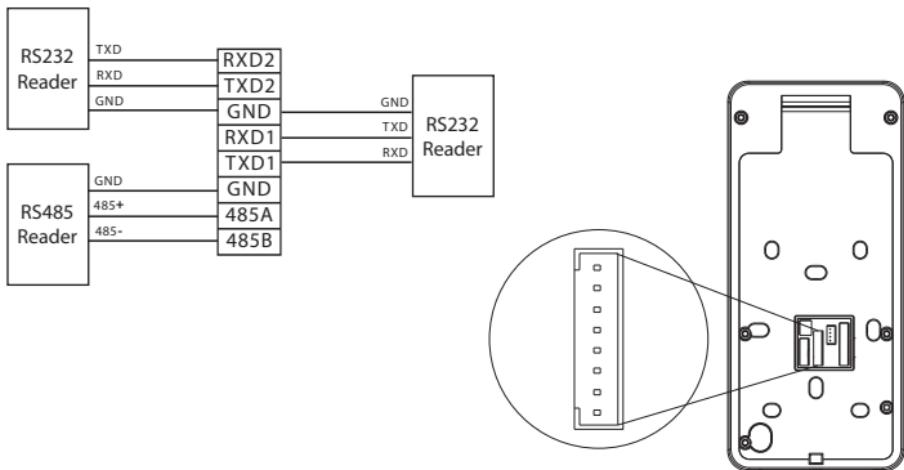


Wiegand Input Connection

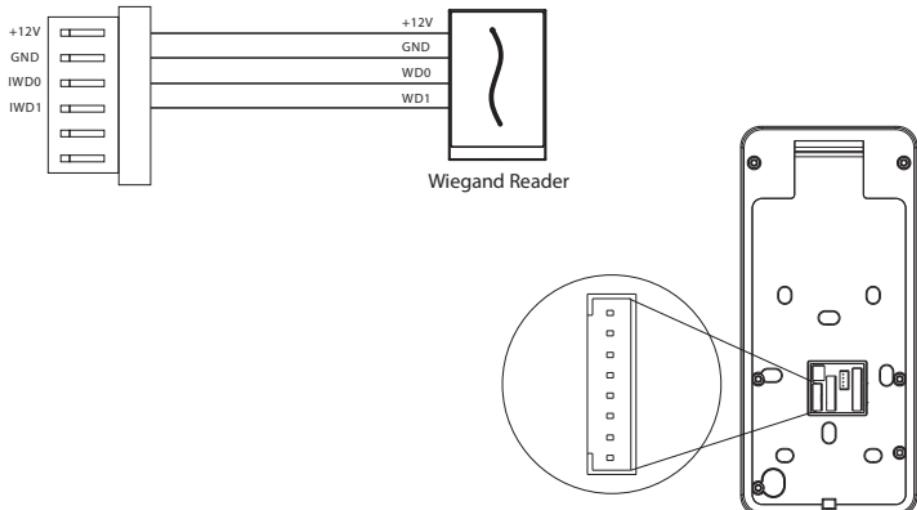

Power Connection

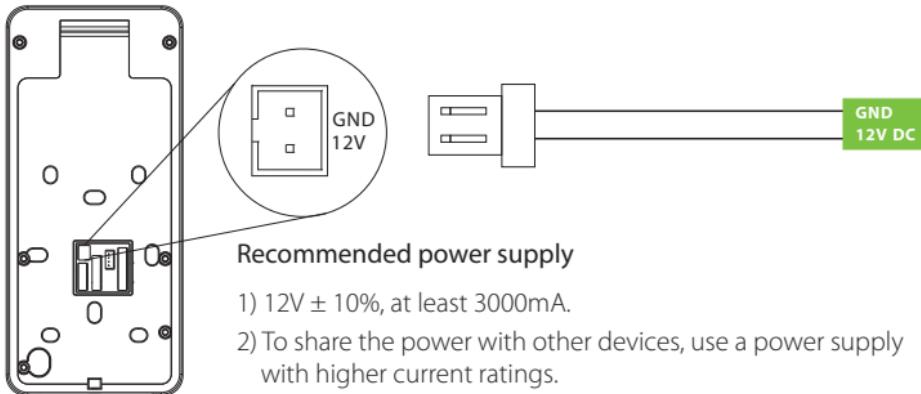


Ethernet Connection

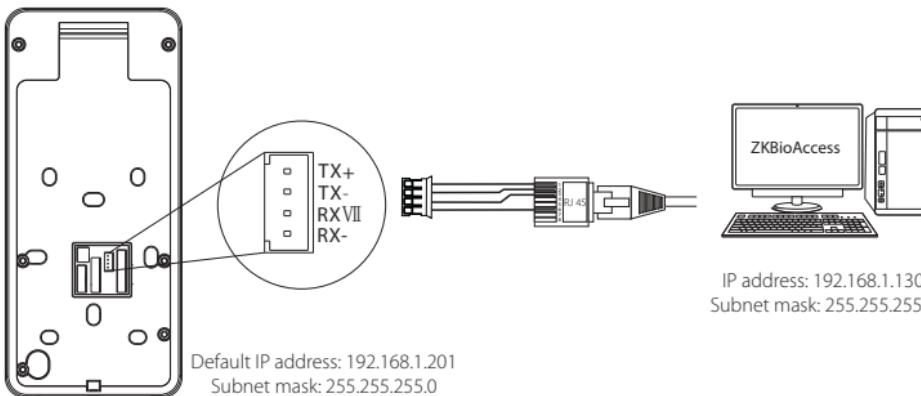

Click [Settings] > [Network Settings] > [TCP/IP Settings] > [DHCP], input the IP address and click [OK].

Note: In LAN, IP addresses of the server (PC) and the device must be in the same network segment when connecting to ZKBioAccess software.


Quick Start



❖ User registration

Register on the device

Click  > Employee >  to register new employee. Enter employee name, ID, register fingerprint, face, badge number (ID and Mifare card are optional), and password.

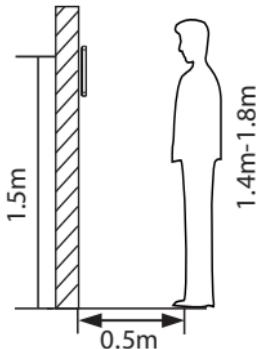

Note:


1. It's recommended to register multiple administrators.
2. It's recommended to enroll user's face in 0.5m distance for person with 1.4~1.8m height .

Register on the software

Please set the IP address and cloud service server address on the device.

1. Click [Access] > [Access Device] > [Device] > [Search Device] to add the device to the software.

When the device has set the server address and port, it can be added automatically.

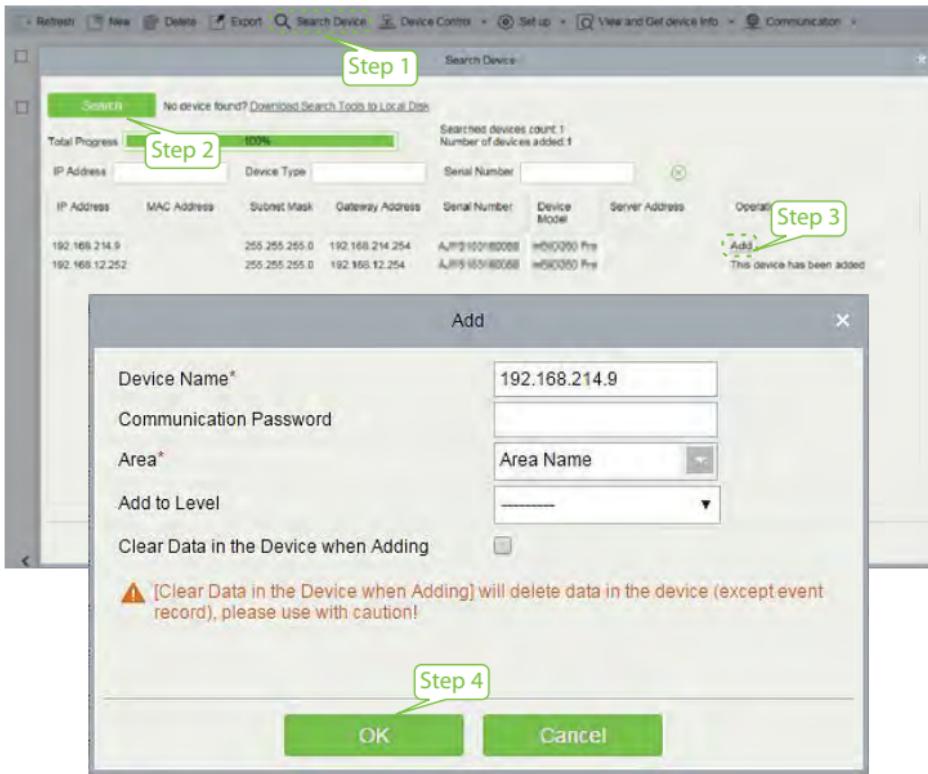

2. Click [Personnel] > [Person] > [New] to register users in the software.

3. Add users to access levels.

4. Click [Access] > [Device] > [Device Control] > [Synchronize All Data to Devices].

For more details, please refer to the ZKBioAccess User Manual.

Note: The icons  or  in the standby interface indicates that the network connection or the server is abnormal. Please check the network cable and network connection.


Register on the phone

Once ZKBioAccess software installation, users could enroll face via browser application on their own mobile phone.

Cloud server IP address Server port


Login onto <http://X.X.X.X:8081/app/v1/adreg> with mobile phone browser application to register users.

The users will display in [Personnel] > [Temporary Personnel], click [Review].

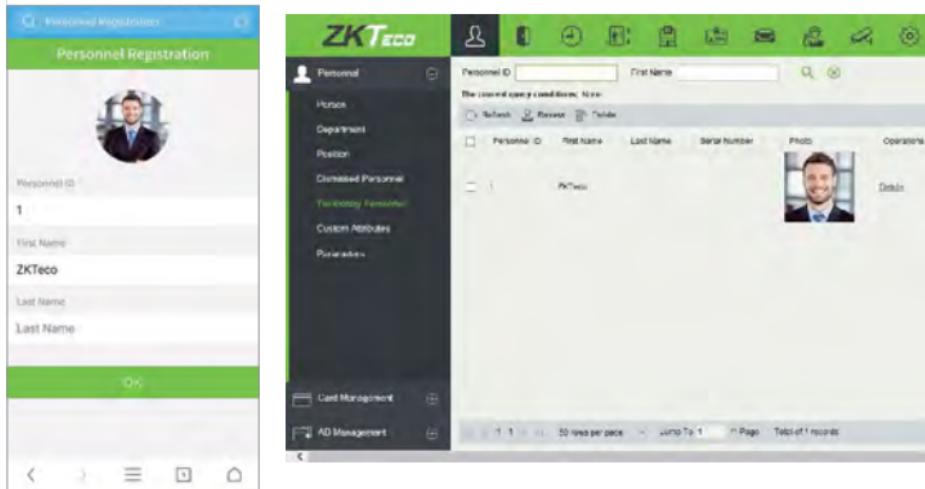

❖ User Authentication

Terminal could detect face in 0.3m to maximum 3m distance. The device switches to face verification interface automatically once it detect bright of environment change. The verification result shows as right image.

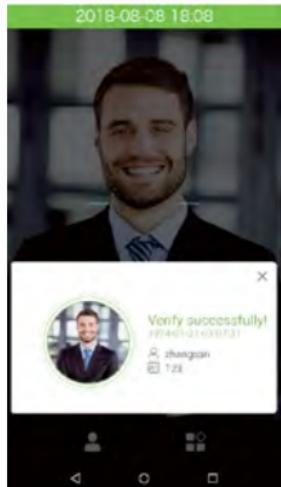


Verification is successful

❖ View records

View records in the device




Click  > Record Search > Att Log enter Name or Employee ID (if user ID field is empty, records of all users will be displayed) > select Time Range > press OK, the corresponding attendance logs will be displayed.

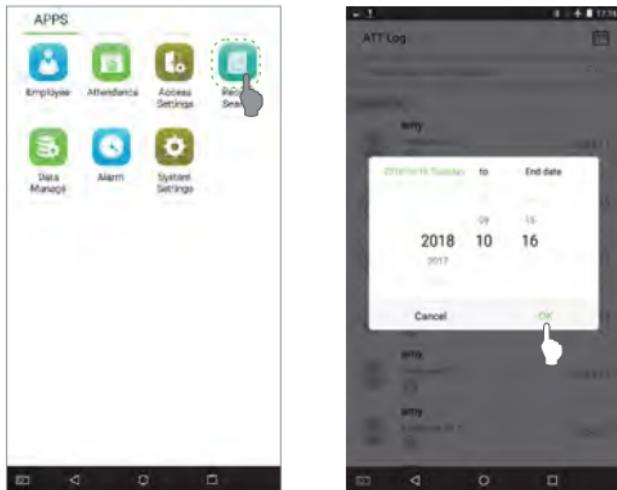

View records on the software

Click [Access] > [Report] on the software to view the records.

Appendix

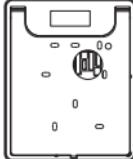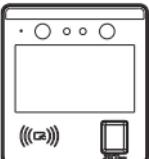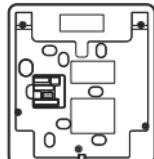Device name	Appearance	
SpeedFace V5		
SpeedFace H5		
SpeedFace T5		

ZK Building, Wuhe Road, Gangtou,
Bantian, Buji Town, Longgang
District, Shenzhen China 518129
Tel: +86 755-89602345
Fax: +86 755-89602394
www.zkteco.com

