

USER MANUAL

inPulse & inPulse+
Access Control Product

Version: 2.1

Date: Feb. 2016

Green
Label

About This Manual

This document describes the user interfaces and menu functions of the finger vein product series. This document can be used in combination with the Access3.5 software. For product installation, please see the start guide of the product.

- The pictures in this manual may not be exactly consistent with those of your product; the actual product's display shall prevail.
- Only some devices are equipped with the ★ functions, the actual product shall prevail.

Important Statement

Thank you for choosing our product. Before starting to use it, please read this manual carefully to avoid damage to the device. We remind you that through proper use, you may experience good effect and verification speed.

No part of this document can be extracted, copied or transmitted by any means without prior written consent of our Company.

The products described in this manual may contain software belonging to SANGFOR or licensors possessing copyright. Unless permitted by obligees, no one can copy, distribute, modify, extract, decompile, disassemble, decode, reverse engineer, rent, transfer, sub-license such software in any form or conduct other behaviors infringing software copyright, exclusive of cases with prohibition of such limitation by applicable laws.



Due to product update, our Company does not promise the consistency of the manual with actual products, and not assume responsibilities for any dispute arising from the discrepancy between actual technical parameters and this manual. The manual is subject to change without prior notification.

Contents

| | |
|--|-----------|
| 1 Guidance Notes | 1 |
| 1.1 Product Functions..... | 1 |
| 1.2 Modes of Enrollment and Verification of Finger Veins & Fingerprints★ | 2 |
| 1.3 Method of Pressing Fingerprint★ | 4 |
| 1.4 Usage of the Touch Screen..... | 4 |
| 1.5 Verification Modes..... | 5 |
| 1.5.1 Finger Vein and Fingerprint Verification ★ | 5 |
| 1.5.2 Password Verification | 6 |
| 1.5.3 Card Verification★ | 7 |
| 1.5.4 Combined Verification | 8 |
| 1.5.5 Combined Verification for Unlocking..... | 8 |
| 1.6 Initial Interface | 9 |
| 2 Main Menu | 11 |
| 3 User Management | 13 |
| 3.1 Adding a User..... | 13 |
| 3.1.1 Entering a User ID..... | 14 |
| 3.1.2 Entering a Name..... | 14 |
| 3.1.3 User Role | 15 |
| 3.1.4 Registering a Finger Vein and Fingerprint..... | 16 |
| 3.1.5 Enrolling a Badge Number ★ | 17 |
| 3.1.6 Enrolling a Password..... | 17 |
| 3.1.7 Setting Access Control Level..... | 18 |
| 3.2 All Users | 19 |
| 3.2.1 Querying a User..... | 19 |
| 3.2.2 Editing/Deleting a User | 20 |
| 3.3 Display Style | 21 |
| 4 User Role | 23 |
| 5 Comm. Settings | 26 |
| 5.1 Ethernet Settings..... | 26 |
| 5.2 Serial Comm. Settings..... | 27 |
| 5.3 PC Connection..... | 27 |
| 5.4 ADMS..... | 28 |
| 5.5 Wiegand Setup | 29 |
| 5.5.1 Wiegand Input | 29 |
| 5.5.2 Wiegand Output | 31 |
| 5.5.3 Card Format Detect Automatically | 31 |
| 6 System Settings | 33 |
| 6.1 Date/Time Settings..... | 33 |
| 6.1.1 Daylight Saving Time | 33 |

| | |
|--|-----------|
| 6.2 Access Logs Setting★ | 35 |
| 6.3 FV&FP★ Parameter Setting | 36 |
| 6.4 Reset to Factory Settings | 37 |
| 6.5 USB Upgrade | 37 |
| 7 Personalize Settings | 39 |
| 7.1 User Interface Settings | 39 |
| 7.2 Voice Settings | 41 |
| 7.3 Bells Settings | 41 |
| 7.3.1 New Bell Schedule | 42 |
| 7.3.2 All Bell Schedules | 43 |
| 8 Data Mgt. | 44 |
| 8.1 Delete Data | 44 |
| 8.2 Backup Data | 45 |
| 8.3 Restore Data | 46 |
| 9 Access Control | 48 |
| 9.1 Access Control Options Settings | 48 |
| 9.2 Time Rule Settings | 49 |
| 9.3 Holidays Settings | 51 |
| 9.3.1 Add Holiday | 51 |
| 9.3.2 Include Holidays | 53 |
| 9.4 Combined Verification Settings | 53 |
| 9.5 Anti-passback Settings | 54 |
| 10 USB Manager | 56 |
| 10.1 USB Download | 56 |
| 10.2 USB Upload | 57 |
| 11 Attendance Search | 58 |
| 12 Autotest | 59 |
| 13 System Information | 60 |
| Appendices | 62 |
| Appendix 1 Text Input Operation Instructions | 62 |
| Appendix 2 USB | 63 |
| Appendix 3 Wiegand Introduction | 63 |
| Appendix 3.1 Wiegand 26 Introduction | 64 |
| Appendix 3.2 Wiegand 34 Introduction | 65 |
| Appendix 4 Anti-passback Settings | 66 |
| Appendix 5 Statement on Human Rights and Privacy | 69 |
| Appendix 6 Environment-Friendly Use Description | 70 |

1 Guidance Notes

Do not expose the device under strong direct sunshine, because strong light has adverse impact on the vein image collector. The operating temperature of the device ranges from 0°C to 40°C and heat dissipation of the device together may compromise its performance, which results in slower response and passing rate. If the device needs to be used outdoors, a housing or heat-radiating equipment is recommended.

The recommended installing height (vertical distance from the ground to the doorbell) the device is 1.4 m based on the user group with the height ranging 1.55 m to 1.75 m. The installation height can be adjusted based on users' average height so that the users press veins and fingers conveniently.

1.1 Product Functions

- Special Functions (Logic of Firmware Application)

1. Finger vein function

The finger vein identification technology is a new technology of biological characteristic identification. It recognizes identities by using images of vein distribution in fingers, and has the features of uniqueness, stability, high identification accuracy, and anti-counterfeiting.

The finger vein function supports enrolling, deletion, verification, and uploading and downloading of finger vein templates via a USB disk or software.

2. User access control

An access control logic adopting a controller has the following functions:

Setting users' valid dates

Setting users' effective time periods

(3) Supporting multiple user verification methods

(4) Setting effective time periods for doors

(5) Setting time periods for door opening

(6) Setting time periods for holidays

(7) Setting the first-card normal open

(8) Setting anti-passback time periods

(9) Setting in/out anti-passback

(10) Keeping controller access control records

(11) Supporting auxiliary input

(12) Supporting Wiegand master and slave device functions

3. USB disk function

You may download user data and access control records to a USB disk and upload user data, promotion pictures and wallpapers in USB disk to the device.


4. Communication over RS485 or Ethernet

The device communicates with the Access3.5 software over the RS485 protocol or Ethernet (TCP/IP).

1.2 Modes of Enrollment and Verification of Finger Veins & Fingerprints★


Note: While enrolling a finger vein, the device also registers the fingerprint of the selected finger.

1. Recommended fingers: index finger and middle finger

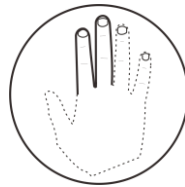

2. Finger placement


① Touch the front end of the finger vein image collector with a fingertip, flatly press the finger pulp against the fingerprint collector so that the device collects the finger vein and fingerprint.

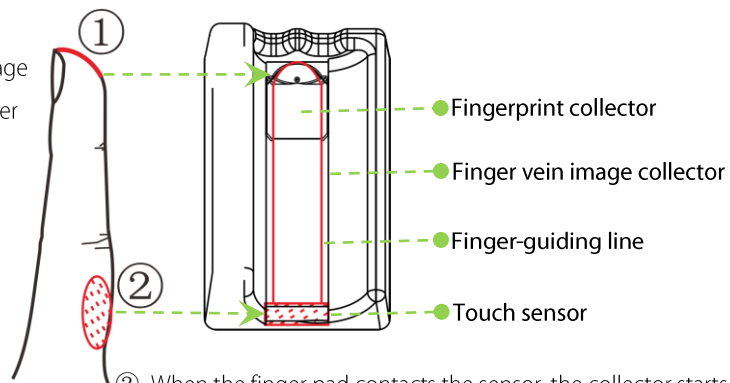

② When the finger pad contacts the sensor, the collector starts collecting the finger vein and fingerprint.

3. Vein verification procedure


①

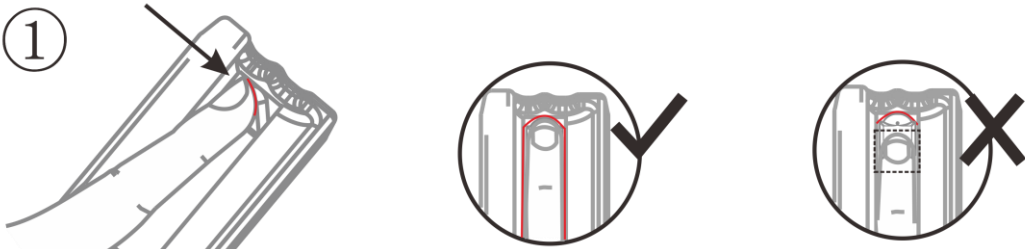

Ensure that the fingertip touches the front end of the finger vein image collector, and flatly press the finger pulp against the fingerprint collector.

Ensure that the fingertip touch the front end of the finger vein image collector. Otherwise, the images of the finger vein and fingerprint cannot be collected correctly.


②

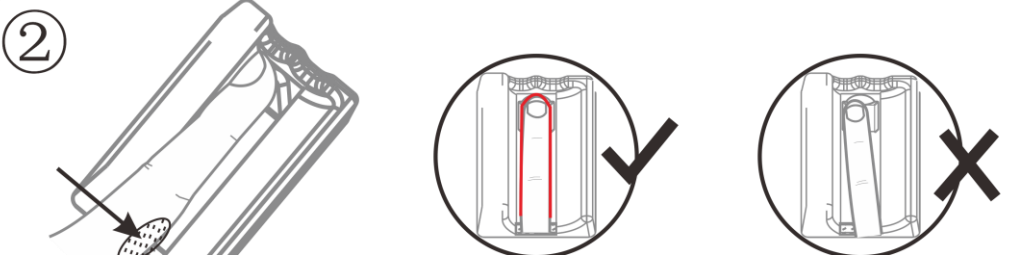

Lay down the finger along the guiding line, keep it in the middle, with the finger pad contacting the sensor.

Correct images of the finger vein and fingerprint cannot be collected if the finger is slanted.

③

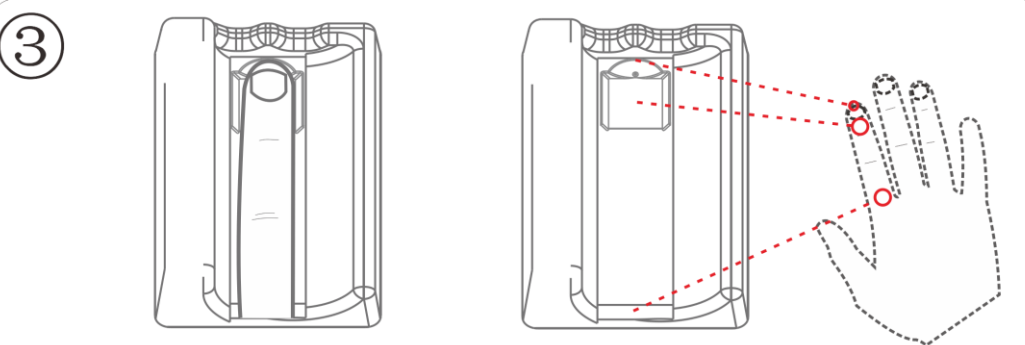

After the finger pad contacts the sensor, the collector starts collecting the finger vein image. Keep the finger in place until you hear a "Bi" sound, and then move away the finger.




- Stretch your hand naturally without force.
- Stretch the finger flat, and try not to bend or rotate it.
- You do not need to press the finger against the collector with force.

1.3 Method of Pressing Fingerprint★


It is recommended to use the **index finger, middle finger** or **ring finger**; avoid using the thumb or little finger.

1. Correct way to press the fingerprint:

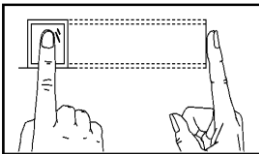


Press the finger horizontally onto the fingerprint sensor; aiming the fingerprint center to that of the sensor.

2. Wrong ways to press the fingerprint:

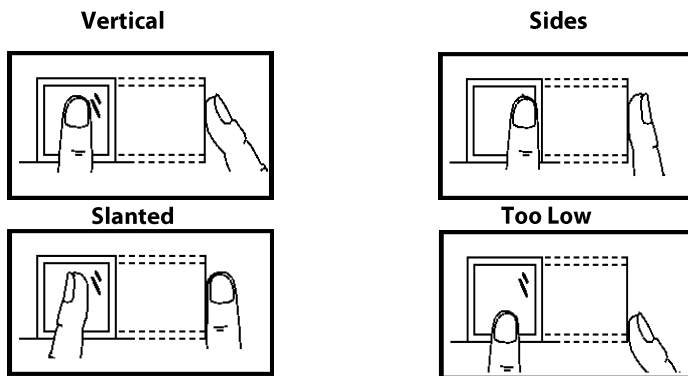


1.4 Usage of the Touch Screen

You may click the touch screen, or click and slide it using a finger pulp. Clicking the screen with a fingertip or fingernail may compromise the use effect.

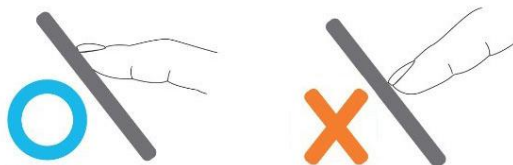

Click  to scroll up/down a screen, or drag the scroll bar on the right.

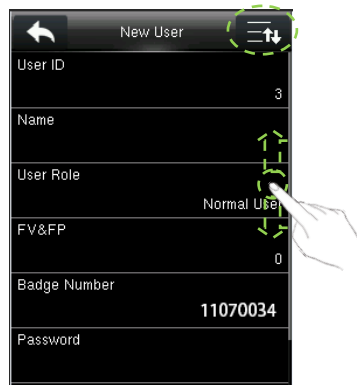


1.5 Verification Modes

1.5.1 Finger Vein and Fingerprint Verification ★

◆ 1:N verification



The finger vein image and fingerprint collected by the collector are compared with all finger vein images and fingerprints in the device.

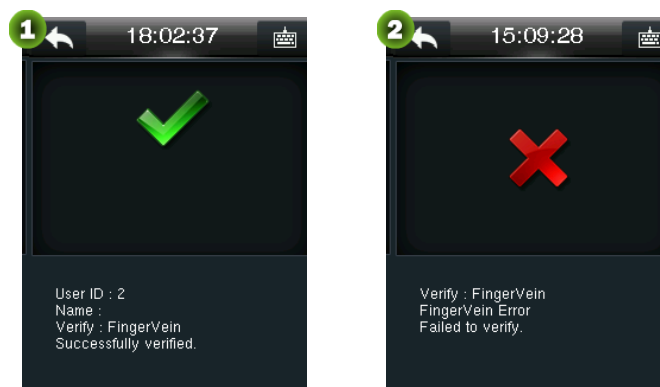
1. The device automatically detects finger vein or other verification modes. When a finger contacts the **finger vein sensor**, the device enters the finger vein and fingerprint verification mode.
2. Press a finger onto the collector correctly. For details, see [1.2 "Modes of Enrollment and Verification of Finger Veins & Fingerprints."](#)
3. After the device generates a "Bi" sound, remove the finger. If the verification succeeds, the device plays the voice prompt "Thank you." and "Successfully verified." is displayed on the screen. If the verification fails, the device plays the voice prompt "Please repress your finger." and "Failed to verify." is displayed on the screen.




◆ 1:1 verification

The finger vein image and fingerprint image currently collected by the collector are compared with the finger vein image and fingerprint image associated with the user ID entered via the keypad. This mode is used when users have difficulty in verifying finger veins and fingerprints.


1. On the initial interface, click  to enter the interface for entering a user ID.
 2. Enter a user ID, and click **OK** (see **Figure 2**) to enter the interface for selecting a verification mode.
-  **Note:** If "No enrollment data" is prompted, the user ID does not exist.
3. Click the finger vein icon (see **Figure 3**) to enter the 1:1 finger vein (fingerprint) verification interface.

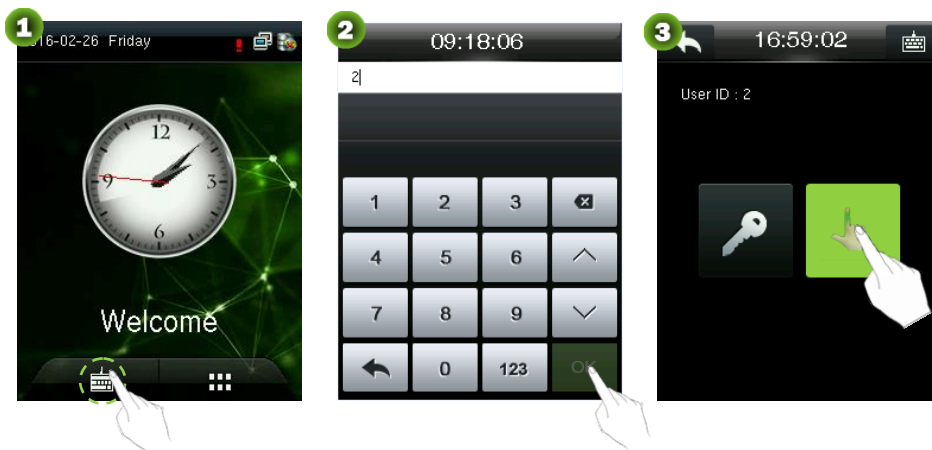

4. Press a finger onto the collector correctly. For details, see [1.2 "Modes of Enrollment and Verification of Finger Veins & Fingerprints."](#)
5. After the device generates a "Bi" sound, remove the finger. If the verification succeeds, the device plays the voice prompt "Thank you." and "Successfully verified." is displayed on the screen (see **Figure 5**). If the verification fails, the device plays the voice prompt "Please repress your finger." and "Failed to verify." is displayed on the screen (see **Figure 6**).

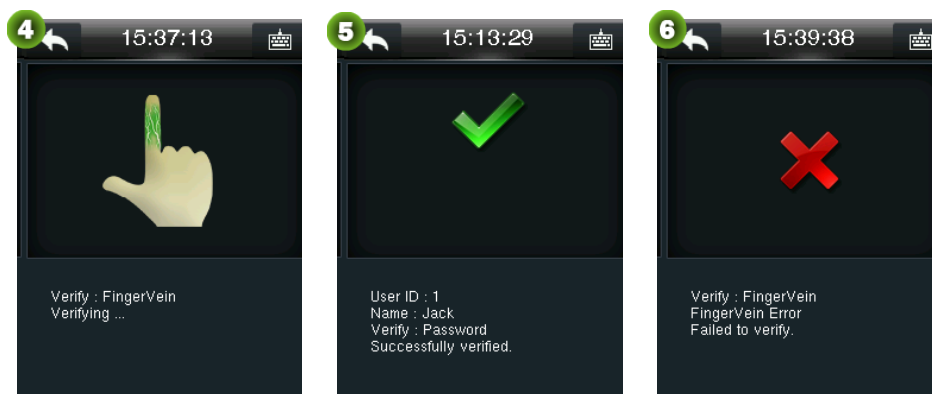

1.5.2 Password Verification


1. On the initial interface, click  to enter the interface for entering a user ID.
2. Enter a user ID, and click **OK** (see **Figure 2**) to enter the interface for selecting a verification mode.

 **Note:** If "No enrollment data" is prompted, the user ID does not exist.

3. Click the key icon (see **Figure 3**) to enter the password verification interface.




4. On the displayed interface, enter a password, and click **OK**. If the verification succeeds, the device plays the voice prompt "Thank you." and "Successfully verified." is displayed on the screen. If the verification fails, the device plays the voice prompt "Wrong password." and "Failed to verify." is displayed on the screen.

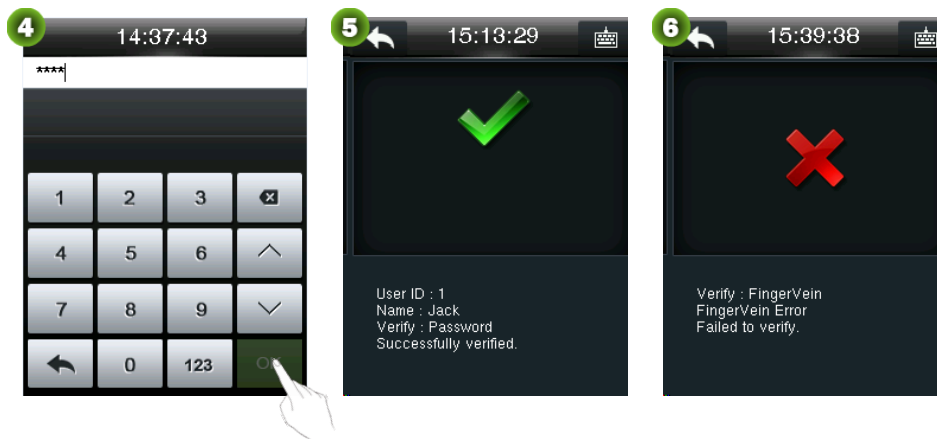

1.5.3 Card Verification ★

1. The card function is optional. Only products with built-in card modules are equipped with the card verification function. Some devices support Mifare cards as ID cards.

2. If the verification succeeds, the device plays the voice prompt "Thank you." and "Successfully verified." is displayed on the screen. If the verification fails, the device plays the voice prompt "ou ou" and "Failed to verify." is displayed on the screen.

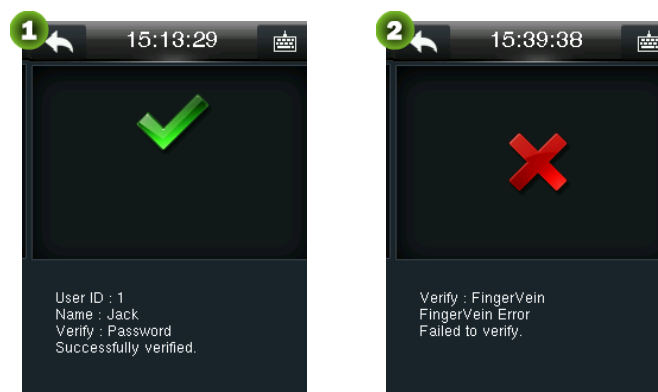


1.5.4 Combined Verification

The device supports combined verification, such as finger vein & password, in which the device needs to verify the password/finger vein after a user passes the finger vein/password verification.


Take the finger vein & password verification for example. Suppose that a user first performs finger vein verification.

1. Press a finger onto the collector correctly. For details, see [1.2 "Modes of Enrollment and Verification of Finger Veins & Fingerprints."](#)


2. After the device generates a "Bi" sound, remove the finger. After the finger vein verification is passed, the password verification interface is displayed (see **Figure 2**).

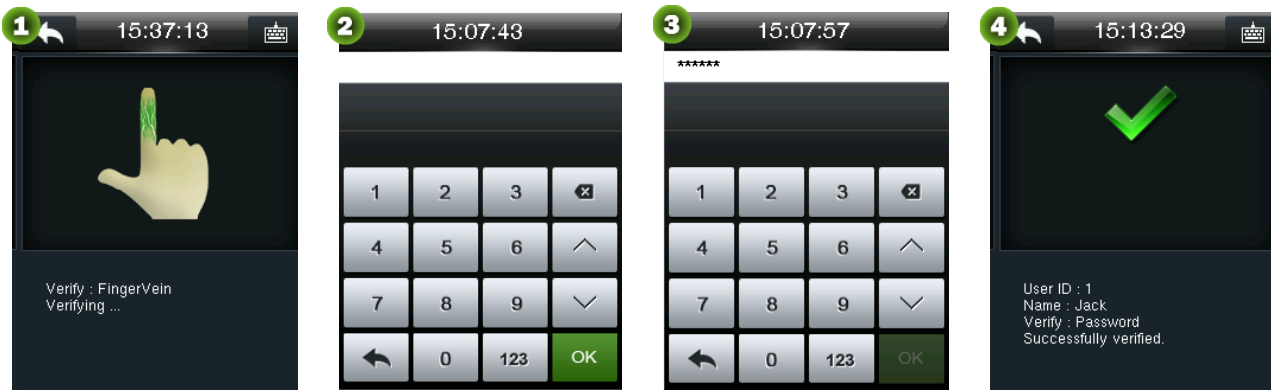

3. Input the correct password, and click **OK**. When the password verification is passed, "Successfully verified." is displayed (see **Figure 4**).

 **Note:** Users may set verification modes as needed. For specific operations, see [9.1 "Access Control Parameters."](#)

1.5.5 Combined Verification for Unlocking


 **Notes:**

(1) For details about how to set combined verification for unlocking, see [9.4 "Combined Settings for Unlocking."](#)

(2) On the interface of adding/editing a user, administrators can specify a group to which a user belongs, and add the user to the group for unlocking. For detailed operation methods, see [3.1.7 "Setting Access Control Level."](#)


For example, add a unlocking combination requiring simultaneous verification of user group 1 and user group 2 (see **Figure 1**), and add users to the user groups for unlocking.

Suppose that the user with the user ID of 1 belongs to user group 1, and the user with user ID of 2 belongs to user group 2.

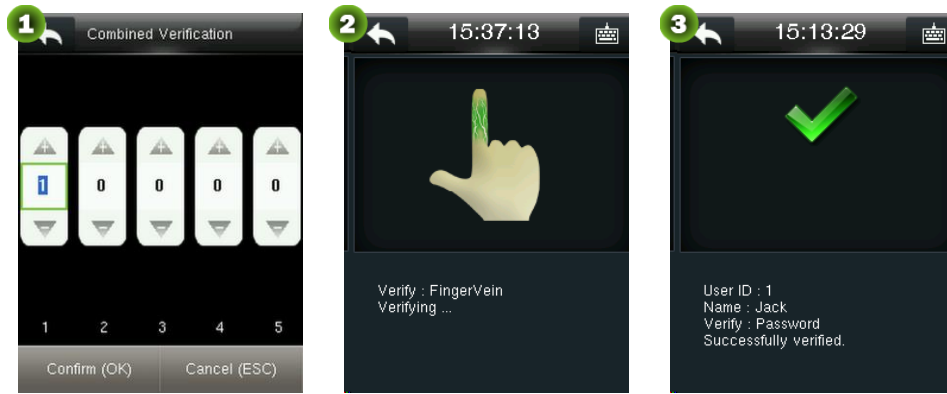

1. The user with the user ID 1 presses a finger onto the collector correctly. For details, see [1.2 "Modes of Enrollment and Verification of Finger Veins & Fingerprints."](#)

2. After the device generates a "Bi" sound, remove the finger. After the finger vein verification is passed (see **Figure 3**), the device displays the prompt "Multi-user verification" (see **Figure 4**).

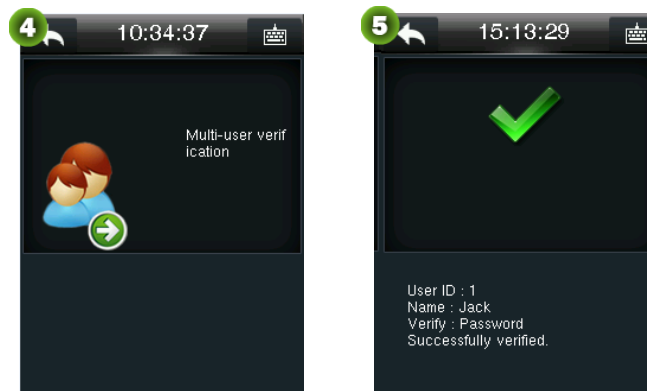

3. The user with the user ID 2 presses a finger onto the collector correctly. After the device generates a "Bi" sound, remove the finger. After the verification is passed, "Successfully verified." is displayed on the screen and the device plays the voice prompt "Thank you."


1.6 Initial Interface



- ① **Date:** The current date of the device is displayed.
- ② **Alarm signal:** An alarm is set for the device if this icon is displayed.
- ③ **Network connection signal:** The network connection status of the device is displayed.
- ④ **Disassembly alarm:** The disassembly alarm button is up if this icon is displayed, and the possible cause is "improper installation" or "illegal disassembly".
- ⑤ **Auxiliary input:** This icon is displayed when the auxiliary input terminal of the device is connected to an auxiliary device and the auxiliary input condition is triggered.
- ⑥ **Time:** The current time of the device is displayed. The 12-hour and 24-hour systems are supported. Users may customize the style of the main interface. For details, see [7 personalized settings](#).
- ⑦ **Menu:** Press this icon to enter the main menu. If administrators are set for the device, you should pass the administrator verification before accessing the main menu.
- ⑧ **1:1 Verification (soft keyboard):** Press the key to enter the interface for inputting a user ID in 1:1 verification mode. After inputting a user ID, click **OK** and complete the 1:1 verification according to prompts on the interface.

2 Main Menu


On the initial interface, click  to enter **Main Menu** (see **Figure 2**). Click  to scroll down the screen (see **Figure 3**) to display more content. (Note: You can click  again to scroll up the screen.)

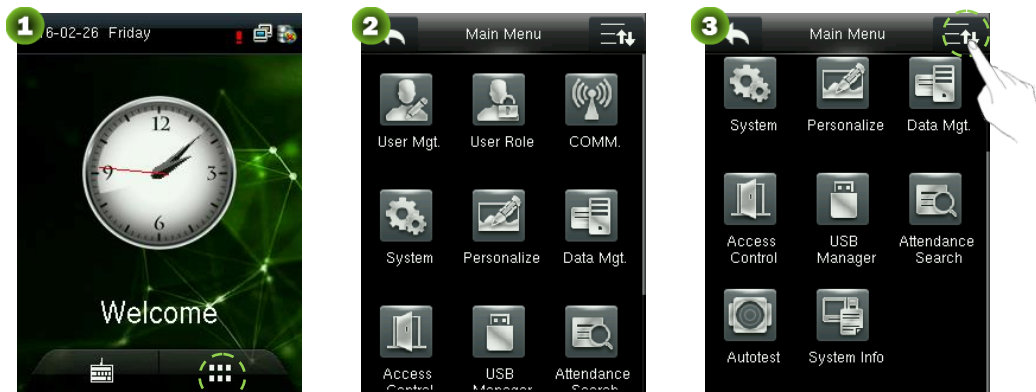

There are 12 sub-menus under the main menu.

| | |
|-----------------------|---|
| User Mgt. | To add and manage users, browse user information (including user IDs, names, user roles, finger vein images, fingerprints, badge numbers ★, passwords, and access control level), and add, query, modify or delete such information. |
| User Role | User Role: To set user roles for accessing the menu and changing settings. |
| Comm. | To set the related parameters of the communication between the device and PC, including Ethernet parameters such as IP address etc., serial Comm, PC connection and Wiegand settings. |
| System | To set system-related parameters and firmware upgrade, including time, access control records, parameters of finger veins and fingerprints and factory settings restoration, so that the device meets user requirements to the maximum extent in functions and display. |
| Personalize | This includes interface display, voice, bell, punch state key mode and shortcut key settings. |
| Data Mgt. | To delete attendance data, all data, super admin role or screen savers etc. |
| Access control | To set the parameters of the control lock and access control devices, including parameters of access control, time rules, holidays, combined unlocking, and anti-pass. |
| USB Manager | To transfer data such as user data and attendance logs from the USB disk to the supporting software or other devices. |
| Attendance | To query the records saved in the device after successful verification. |

| | |
|--------------------|--|
| search | |
| Autotest | To automatically test different module's functions, including the LCD, voice, keyboard, fingerprint sensor and clock RTC test. |
| System Info | To check device capacity, device and firmware information. |


When no administrator is set, anyone may access the main menu by clicking . After an administrator is set, a user should pass the administrator identity verification before entering the menu.



For the sake of security, it is recommended that an administrator be registered when the device is used for the first time.


3 User Management

The basic user information registered in the device includes user IDs, names, user roles, finger vein images and fingerprints★, passwords, badge numbers ★, and access control level. Such information is subject to change due to personnel changes, and therefore the device supports the adding, deleting, query and modifying operations.

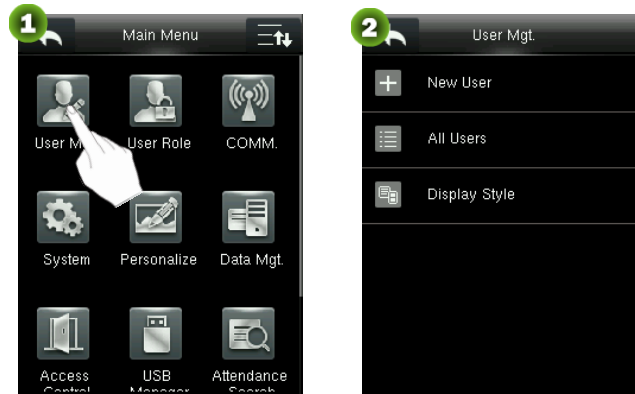

3.1 Adding a User

On the **User Mgt.** interface, click **New User** to enter the **New User** interface, and click  to scroll down the screen to display more content. (Note: You can click  again to scroll up the screen.)

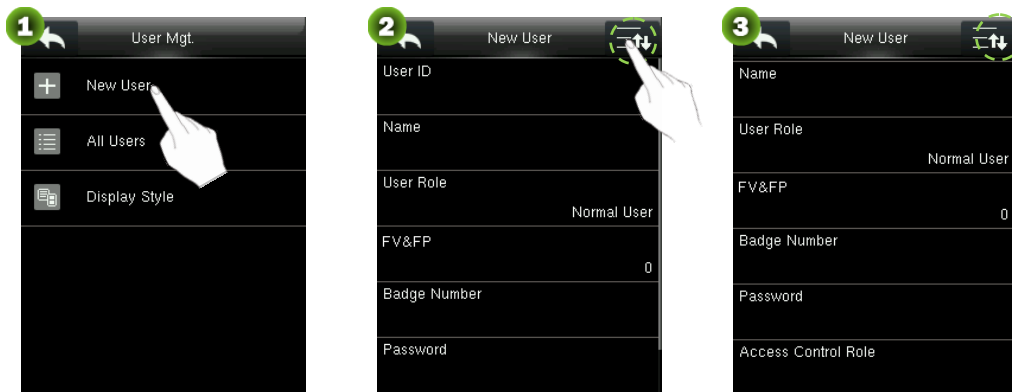

User ID: Enter a user ID. By default, 1-9 digits are supported.

Name: Enter a user name. By default, 1-24 characters are supported. One Chinese character takes up two characters.

User Role: Set user roles. The default value is **Normal User**. You may choose **Super Admin**. A normal user can only use verification by finger vein, fingerprint ★, badge ★ or password, while an administrator has all the functions of normal users and the access to the main menu.

FV&FP ★: Enroll a finger vein and fingerprint. Index and middle fingers are recommended.

Password: Enroll a password. By default, 1-8 digits are supported.

Badge Number ★: Enroll a badge number.

Access Control Level: Set a user's access control level.

3.1.1 Entering a User ID


The device automatically assigns user IDs to users, starting from 1. If you use a device-assigned number, skip this step.

1. On the **New User** interface, click **User ID**.



 **Tips: Enrolled user IDs cannot be modified.**

2. On the displayed interface, enter a user ID to be registered, and click **OK** to save the setting and return to the **New User** interface. If "User ID exists!" is displayed, it indicates that the user ID has been used. Please enter another ID.

 **Tips:** By default, user ID of 1-9 digits is supported. To extend digits, consult our business representatives or pre-sales technical support personnel.


3.1.2 Entering a Name


Enter a user name by using the T9 input method via keypad.

1. On the **New User** interface, click **Name**.

2. On the displayed interface, enter a user name to be registered. Click words to select them.

For operations on the keypad interface, see [Appendix 1 Text Input Operation Instructions](#).

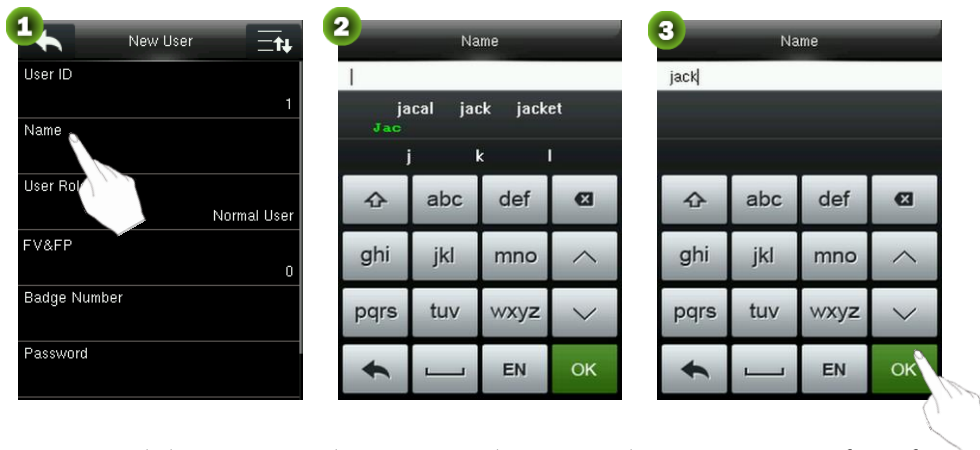

3. After entering a name, click **OK** to save the setting and return to the **New User** interface. If you click , the device returns to the upper-level interface without saving the information.

 **Tips:** By default, names of 1-24 characters are supported. One Chinese character takes up two characters.

3.1.3 User Role

The device supports two user roles: **Normal User** and **Super Admin**.


Super Admin: A super administrator is permitted to perform operations on all the menus.

Normal User: When an administrator is set, a normal user can use only finger vein (fingerprints ★), passwords or badges ★ for verification. When no administrator is set, a normal user is permitted to perform operations on all the menus.


User Defined Role: After a super administrator is set, you can define roles in **User Role** and assign menu operation rights to the roles. User-defined roles possess all the rights of a normal user, that is verification via finger vein (fingerprint ★), password and badge.

 indicates the current user is an administrator.

1. On the **New User** interface, click **User Role**.

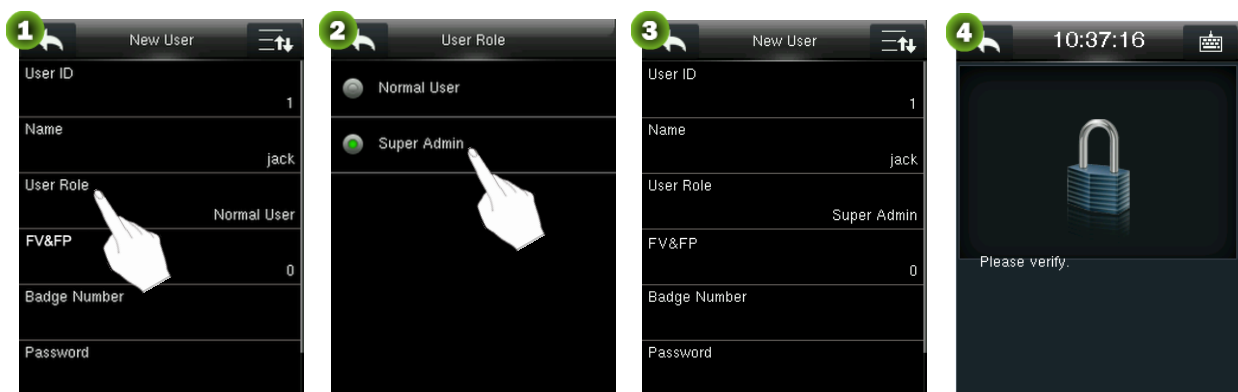


2. Select a role as needed. Then, the device returns to the **New User** interface.

 **Note:** After a super administrator is added, you need to pass the super administration verification before accessing the main menu.

3.1.4 Registering a Finger Vein and Fingerprint

 **Note:** While enrolling a finger vein, the device also registers the fingerprint of the selected finger.


1. On the **New User** interface, click **FV&FP** to enter the **Register FV& FP** interface (see **Figure 2**).

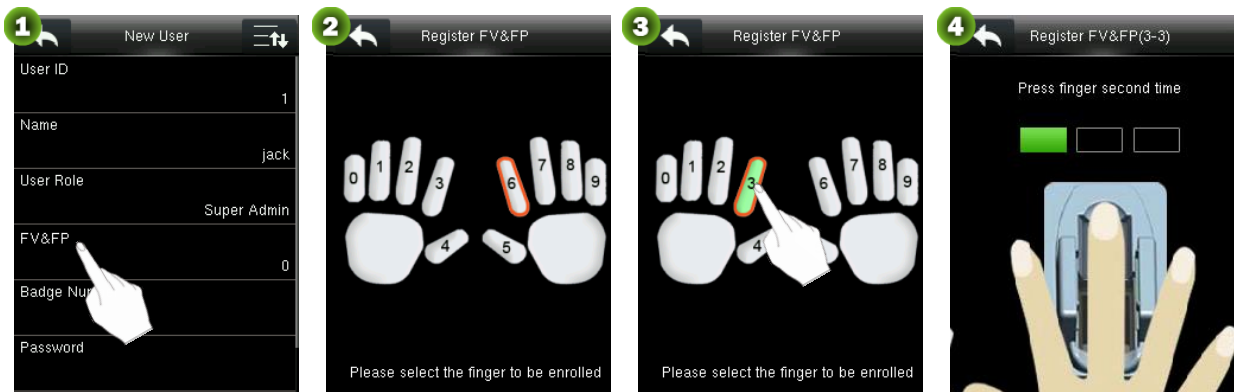

2. On the displayed interface, click a finger to enroll the finger vein and fingerprint (see **Figure 3**).

3. Press the same finger onto the collector correctly for consecutive three times as according to prompts on the device (see **Figure 4**). For details, see [1.2 "Modes of Enrollment and Verification of Finger Veins."](#)

After the finger vein and fingerprint are successfully collected for three times, "Enrolled successfully." is displayed on the screen (see **Figure 5**), and the device returns to the **New User** interface displaying the quantity of registered veins and fingerprints (see **Figure 6**). If the collection fails, "Fingerprint Registration Failure." is displayed (see Figure 7). To continue registration, repeat steps 2 and 3.

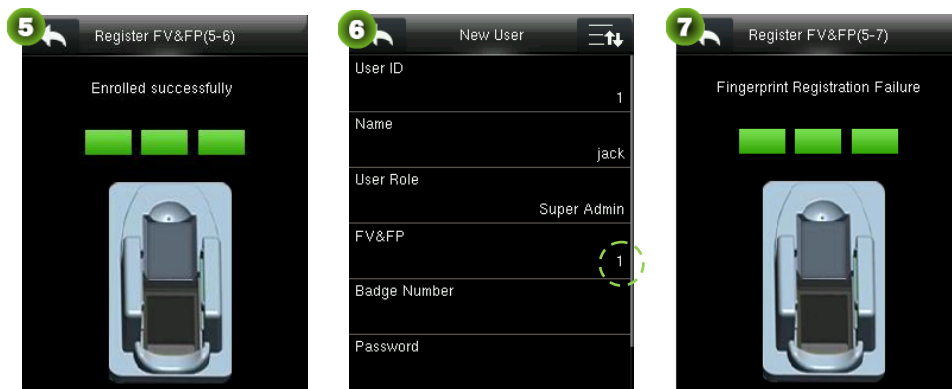


 **Notes:**

(1) During enrollment of veins and the fingerprint, a "Bi" sound generated by the collector indicates that single collection is successful.

(2) For better collection of veins and fingerprints, remove the finger after successful collection each time (after a "Bi" sound is generated), and continue the enrollment by pressing the finger again as instructed.

3.1.5 Enrolling a Badge Number ★

1. On the **New User** interface, click **Badge Number** to enter the **Enroll Badge Number** interface (see **Figure 2**).
2. Swipe a badge over the area. For details about the card-swiping area, see the mark in [1.6.1 "Product Appearance."](#)
3. After the card is read successfully, the badge number is displayed (see **Figure 3**) and the device returns to the **New User** interface (see **Figure 4**).

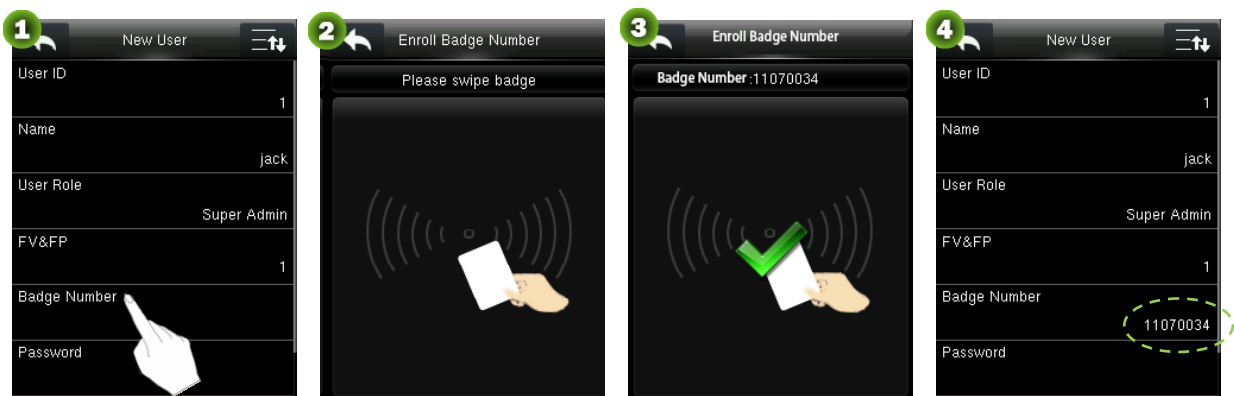

Note: Some devices support Mifare cards as ID cards.

3.1.6 Enrolling a Password

1. On the **New User** interface, click **Password**.
2. On the displayed keypad interface, enter a password and click **OK** (see **Figure 2**).

Tips: By default, passwords of 1-8 digits are supported.

3. Re-enter the password as instructed, and click **OK** to save the password (see **Figure 3**). After successfully saving the password, the device returns to the **New User** interface (see **Figure 4**).




Notes:

- (1) The passwords entered in steps 2 and 3 must be the same.
- (2) If you enter inconsistent passwords, you need to return to step 2 and enter it again.

3.1.7 Setting Access Control Level

On the **New User** interface, click **Access Control** to enter the **Access Control** interface (see **Figure 2**).

The access control level is used to set level of door opening for each user, including the access group and time period rules.

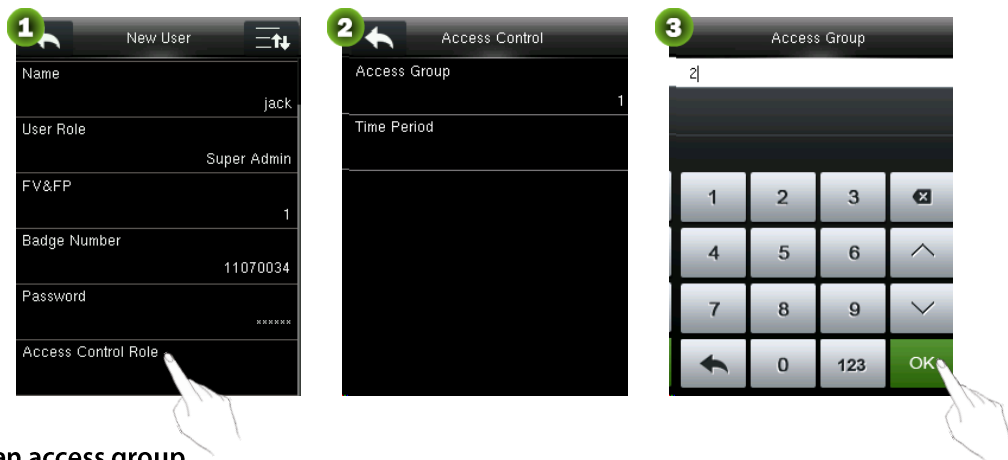



- **Setting an access group**


Set a user group to which a user belongs, to facilitate unlocking combination settings. A valid group number ranges from 0 to 99.

- (1) On the **Access Control** interface, click **Access Group**.
- (2) Enter the number of the group to which the user belongs, and click **OK** (see **Figure 3**) to save the settings and return to the **Access Control** interface.

- **Setting a time period**

Select time rules for the user. Time rules are set under the **Access Control** menu and a maximum of 50 time rules are supported. The effective door opening time period of the user is the sum of the selected time rules.


- (1) On the **Access Control** interface, click **Time Period** to enter the **Time Period** interface (see **Figure 4**). Click  to scroll up/down the screen to display more content.
- (2) In the time rule list, click and select a time rule (multiple selections are allowed and the symbol indicates that a time rule is selected), and click  (see **Figure 5**) to save the settings and return to the previous interface.

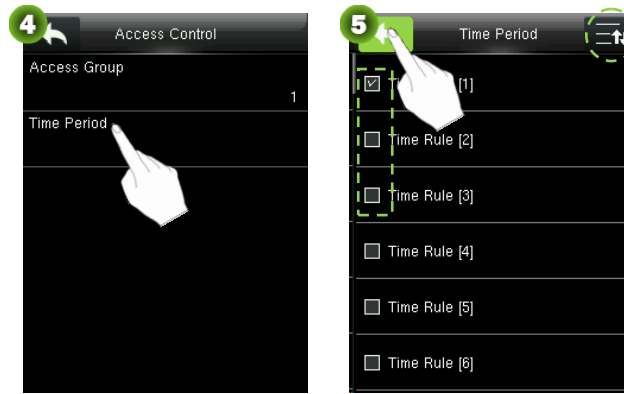


3.2 All Users

On the **User Mgt.** interface, click **All Users** to enter the **All User** interface (see **Figure 2**). Administrator may query, edit or delete users.




: indicates that the current user is a super administrator.

: indicates the user's fingerprint is enrolled ★.

: indicates that the user's badge number is enrolled ★.

: indicates that the user's password is enrolled.

: indicates that the user's finger vein is enrolled.

 **Tips:** The information of all enrolled users is displayed according to the preset **Display Style**. For details about the **Display Style**, see [3.3 "Display Style."](#)

3.2.1 Querying a User

You may query users by name or user ID. The detailed operation is as follows:

1. Click the query box (see **Figure 1**) to enter the interface shown in **Figure 2**.

2. Enter a query condition, click **OK** (see **Figure 3**) to return to the **All Users** interface. The information of the relevant user is displayed according to the query condition (see **Figure 4**).





3.2.2 Editing/Deleting a User

On **All Users** interface, click a user (see **Figure 1**) to enter the interface shown in **Figure 2**.

- **Editing a user**

Click **Edit** (see **Figure 3**) to enter the **New User** interface (see **Figure 4**).

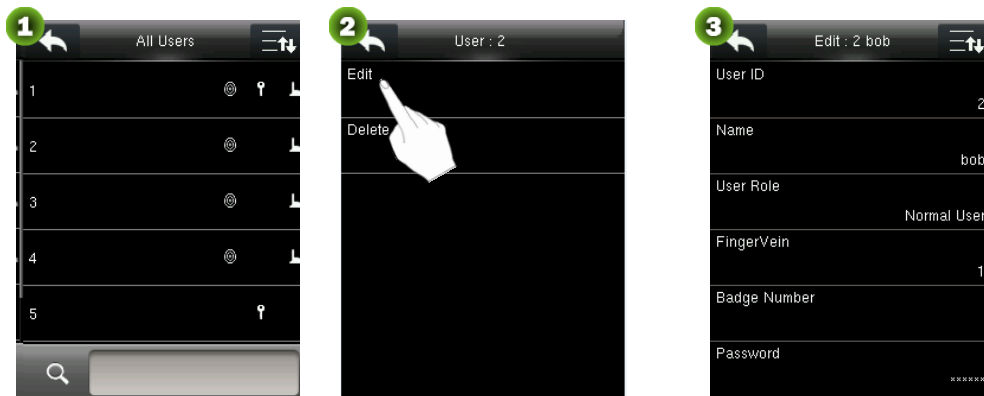


2. Modify the user's information, and click  to save settings and return to the previous interface.

Note: The method of editing a user is the same as that of adding a user and is not described here.

- **Deleting a user**


1. Click **Delete** (**Figure 5**) to enter the interface as shown in **Figure 6**. Operation items are displayed according to the enrolled information.

Example: If a user's password is not enrolled, the item **Delete Password Only** is not displayed.

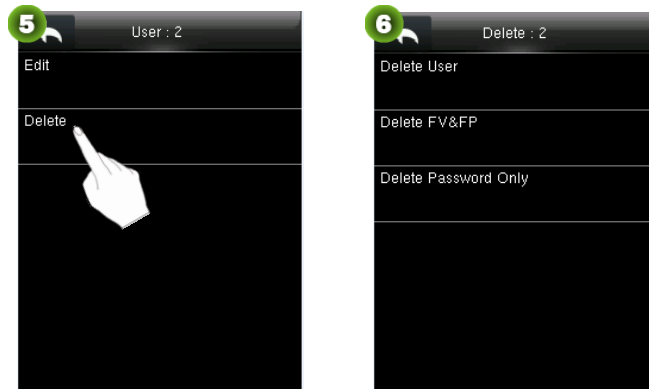

The following uses **Delete Password Only** as an example. The operation is described as below.

2. Click **Delete Password Only** (see **Figure 7**), and a dialog box (see **Figure 8**) is displayed.

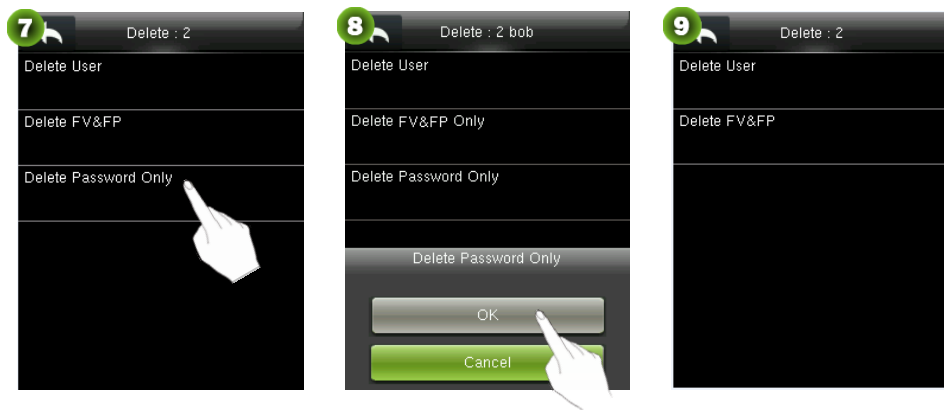

3. Click **OK** to delete all the **Passwords**, or click **Cancel** to cancel the operation.


Notes:

- (1) When deleting a user, the device delete all information of the user, including the finger vein, fingerprint ★, password, and badge number ★.
- (2) When deleting a user role only, the device changes the user's role to **Normal User**.
- (3) After the role of last super administrator is deleted, all user-defined roles becomes unavailable.

3.3 Display Style

1. On the **User Mgt.** interface, click **Display Style** to enter the **Display Style** interface shown in **Figure 2**.


 **Tips:** The default display style is **Single Line**.

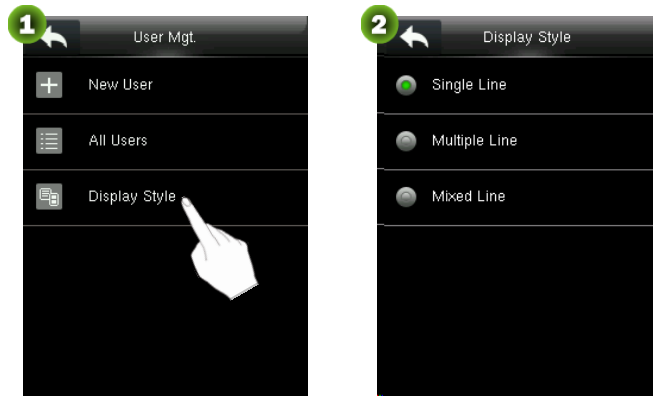

2. On the **Display Style** interface, you may select **Single Line**, **Multiple Line** or **Mixed Line** for the display of user information.



Single Line style

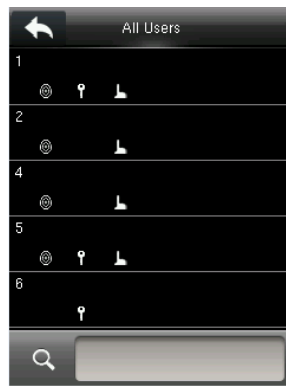

Multiple Line style



Mixed Line style


4 User Role


You can set user defined roles and assign operation levels to roles in User Role.



The user defined roles are set as follows:

In **User Role** list, select a role to be edited (see **Figure 3**) to enter the **User Defined Role** interface (see **Figure 4**).

 **Note:** User defined roles can be set only after a super administrator is added. Otherwise, the dialog box shown in **Figure 5** is displayed.

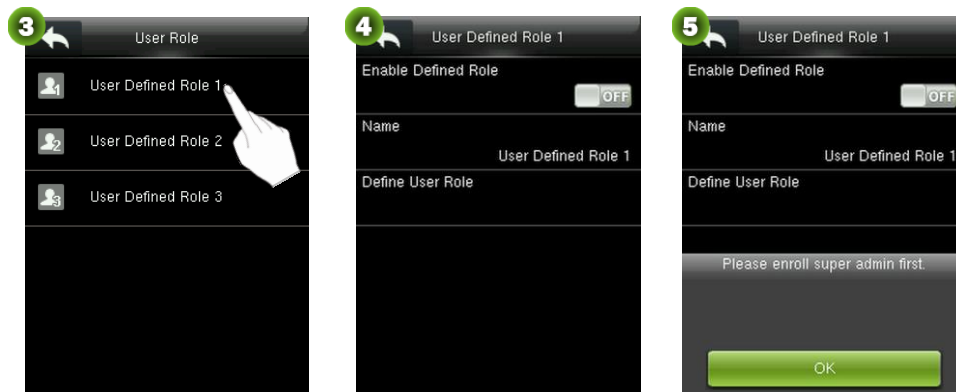

- **Enable Defined Role**

The default value is OFF, indicating that the role is disabled. Click and drag the icon to switch between ON and OFF. The ON icon means the role is enabled.

- **Name**

Set a name for the role. Click **Name** to enter the **Name** interface (see **Figure 7**). Enter a name using the T9 input method, and click **OK** (see **Figure 8**) to save the settings and return to the previous interface (see **Figure 9**).


For detailed about how to enter a name, see [Appendix 1 Text Input Operation Instructions](#)



● **Define User Role**


To assign operation level to a role, do as follows:

1. Click **Define User Role** to enter the interface shown in **Figure 11**, and click to scroll down the screen to display more content.



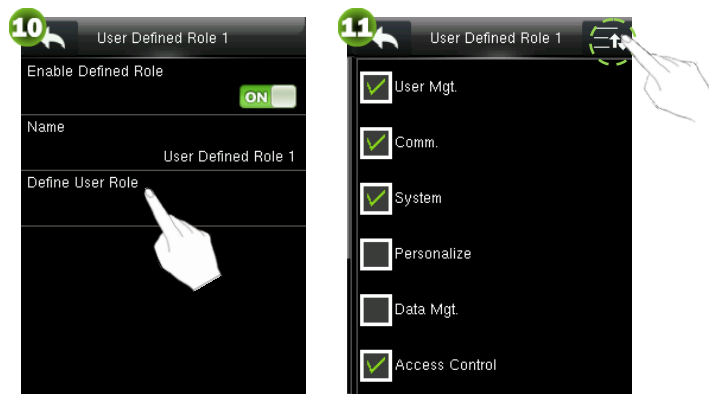


2. Assign operation levels to the role (the symbol indicates the item is selected).

Tips: Click a parent level (see **Figure 12**) to enter an interface of child level selection (see **Figure 13**).

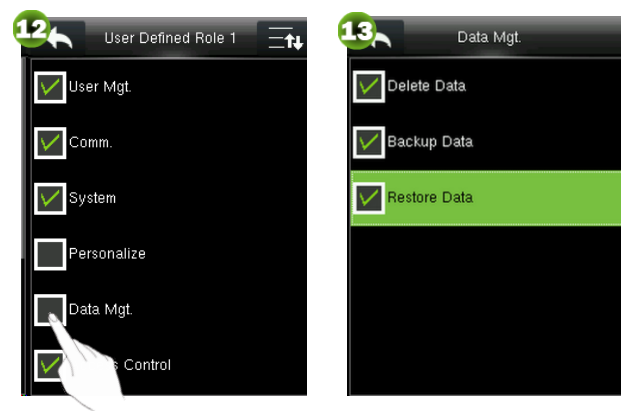

3. After setting, click (see **Figure 14**) to save the settings and return to the **User Defined Role** Interface.
4. On the **User Defined Role** interface, click (see **Figure 15**) to save settings and return to **User Role** interface.

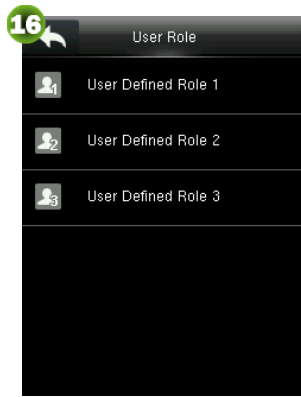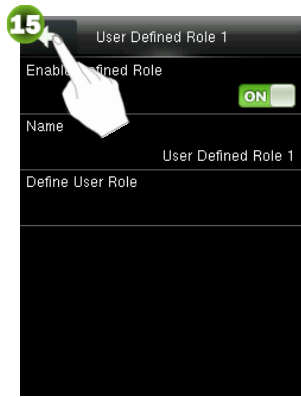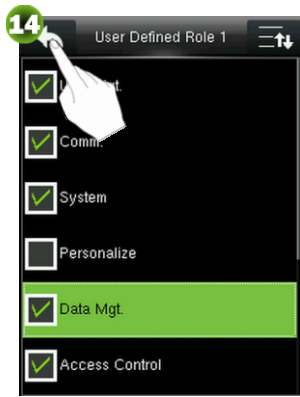


5 Comm. Settings



Set the parameters for the communication between the device and a PC, including the IP address, gateway, subnet mask, baud rate, device number, and connection password.

5.1 Ethernet Settings

On the **Comm.** interface, click **Ethernet** to enter the **Ethernet** interface, and click to scroll down the screen to display more content. (Note: You can click again to scroll up the screen.)

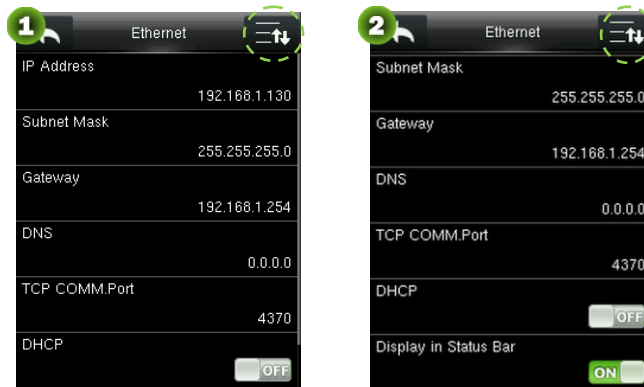

The parameters below are the factory default values, please adjust them according to the actual network situation.

IP Address: 192.168.1.201

Subnet Mask: 255.255.255.0

Gateway: 0.0.0.0


DNS: 0.0.0.0

TCP COMM. Port: 4370

DHCP: Dynamic Host Configuration Protocol, which is to dynamically allocate IP addresses for clients via server.

Display in Status Bar: To set whether to display the network icon on the status bar.

5.2 Serial Comm. Settings

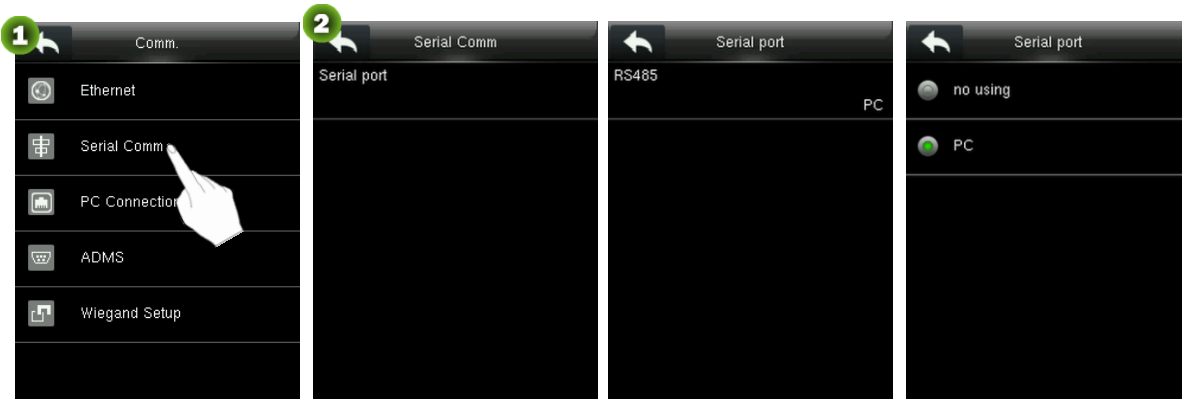

Click **Serial Comm** to enter the **Serial Comm** interface

Click **Serial Port** to enter

Click **RS485** to enter


Select **RS485** as the function of "PC" or choose to disable RS485

☺ Remarks:

When RS485 is used as the function of "PC", the device can communicate with PC by RS485 cable.

5.3 PC Connection

To improve security of data, **Comm Key** for communication between the device and PC needs to be set. If a **Comm Key** is set in the device, the correct connection password needs to be entered when the device is connected to the PC software, so that the device and software can communicate.

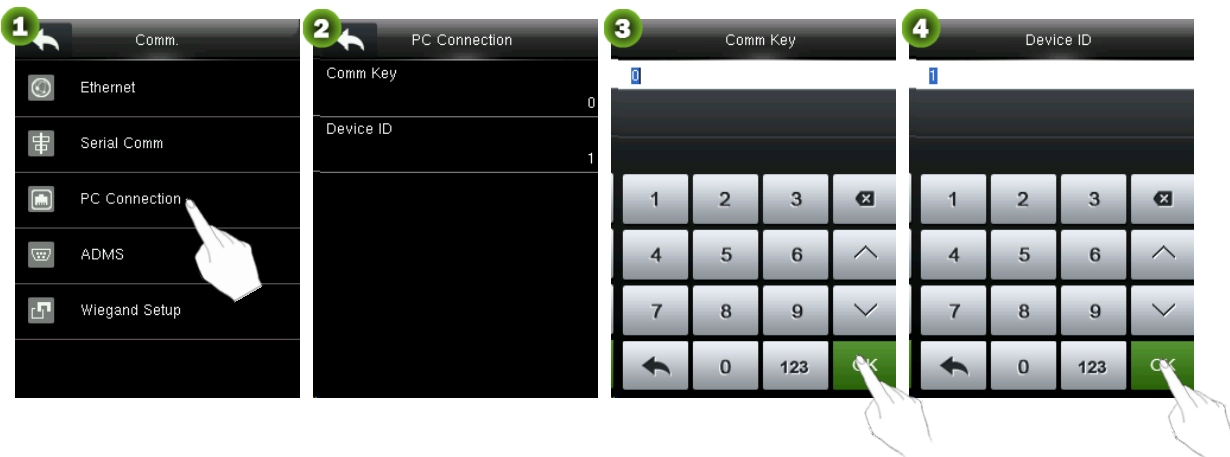


● Comm key Settings

Comm Key: The default password is 0 (no password). Enter the **Comm Key** interface, enter the password, click **OK** (Figure 3) to save the settings and return to the **PC Connection** interface.

📌 Note: **Comm Key** can be 1-6 digits and ranges from 0-999999.


● Device ID Settings



Set the device ID. The default value is 1. Click **Device ID** to enter the **Device ID** interface, enter the ID, and click **OK** (see **Figure 4**) to save the settings and return to the **PC Connection** interface.

 **Note:** The identity number of the device ranges from 1 to 254. For RS232 serial communication, the identity number of the device needs to be entered on the software communication interface.

5.4 ADMS

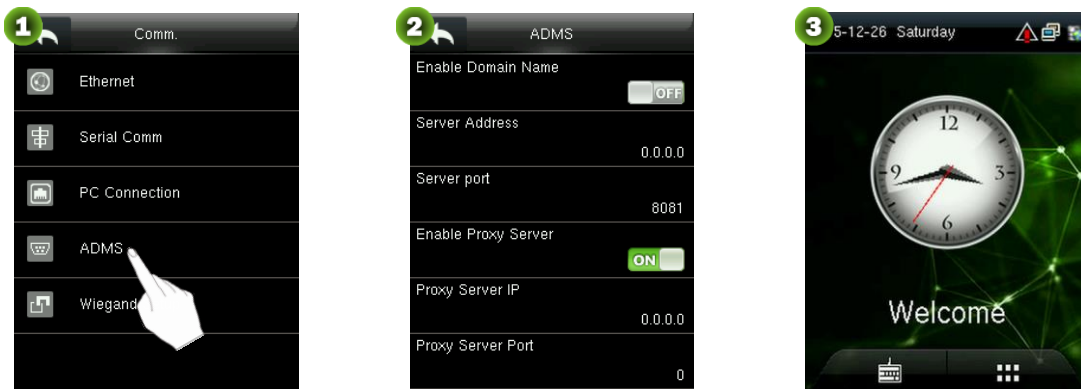Settings used for connecting with ADMS server, such as IP address and port settings, and whether to enable proxy server etc.



In the initial interface, press  > Comm. > ADMS to enter the ADMS server setting interface. When the Webserver is connected successfully, the main interface will display the  logo.


Enable Domain Name: When this function is turned on, the domain name mode http://... will be used, such as http://www.XXX.com. XXX denotes the domain name when this mode is on; when this mode is off, enter the IP address format in XXX.

Server Address: IP address of the ADMS server.

Server Port: Port used by the ADMS server.


Enable Proxy Server: Method of enabling proxy. To enable proxy, please set the IP address and port number of the proxy server. Entering proxy IP and server address will be the same

5.5 Wiegand Setup

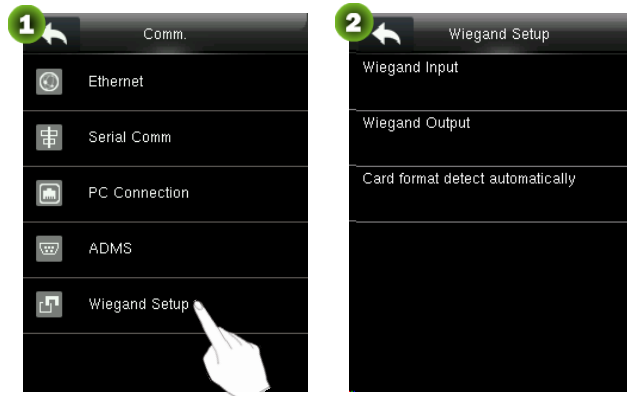

5.5.1 Wiegand Input

Set the Wiegand format of an externally connected reader.

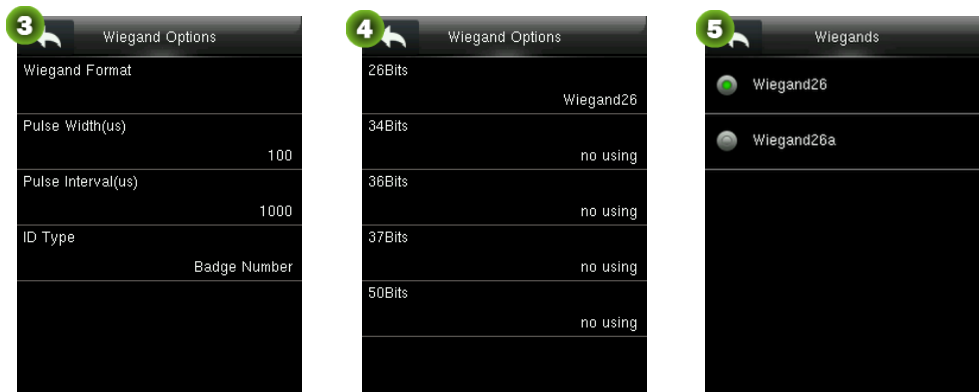

Wiegand Format: User can choose among the following built-in Wiegand formats: Wiegand 26, Wiegand 26a, Wiegand 34, Wiegand 34a, Wiegand 36, Wiegand 36a, Wiegand 37, Wiegand 37a, Wiegand 50 and.

No using. The value **no using** means that the format with this bit number is not used. The following table describes all the formats.

Pulse Width (us): The width of pulse sent by Wiegand. The default value is 100 microseconds, which can be adjusted within the range of 20 to 100 microseconds.


Pulse Interval (us): The default value is 1000 microseconds, which can be adjusted within the range of 200 to 20000 microseconds.

ID Type: Input content included in Wiegand input signal. **User ID** or **Badge Number** can be chosen.

Definitions of Wiegand Formats:

| Wiegand Format | Definition |
|----------------|---|
| Wiegand26 | ECCCCCCCCCCCCCCCCCCCCCO Consists of 26 bits of binary code. The 1 st bit is the even parity bit of the 2 nd to 13 th bits, while the 26 th bit is the odd parity bit of the 14 th to 25 th bits. The 2 nd to 25 th bits are the card number. |

5.5.2 Wiegand Output

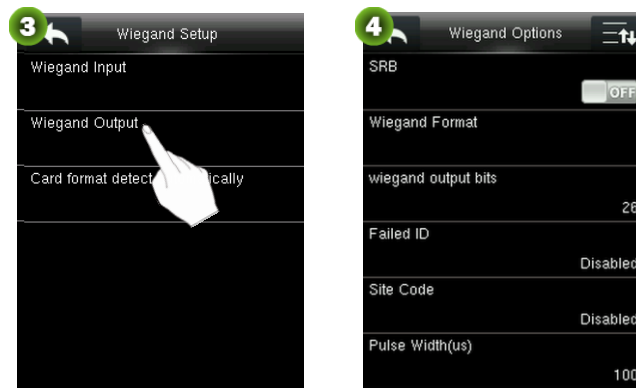

SRB: Select [ON] to turn the SRB function on, while choosing [OFF] can disable the function.

Wiegand format: Users can select the standard Wiegand formats built in the system. See the definitions of all types of general Wiegand formats in 5.4.1 "Wiegand Input." Multiple choices are supported, but the actual format is determined by **Wiegand output bits**.

Wiegand output bits: Number of bits of Wiegand data. After choosing [**Wiegand output bits**], the device will use the set number of bits to find the suitable Wiegand format in [**Wiegand Format**].

For example, if 26-bit Wiegand26, 34-bit Wiegand34a, 36-bit Wiegand36, 37-bit Wiegand37a and 50-bit Wiegand50 are selected but the Wiegand output bits is set to 36, the 36-bit Wiegand36 format is adopted.

Failed ID: It is defined as the output value of failed user verification. The output format depends on the [**Wiegand Format**] setting. The default value ranges from 0 to 65535.

Site Code: It is similar to device ID except that it can be set manually and repeatable with different devices. The default value ranges from 0 to 256.


Pulse Width (us): The width of pulse sent by Wiegand. The default value is 100 microseconds, which can be adjusted within the range of 20 to 100 microseconds.

Pulse Interval (us): The default value is 1000 microseconds, which can be adjusted within the range of 200 to 20000 microseconds.

ID Type: Output content after successful verification. User ID or card number can be chosen.


5.5.3 Card Format Detect Automatically

[**Card Format Detect Automatically**] aims at assisting user with quickly detecting the card type and its corresponding format. Various card formats are preset in the device. After card swiping, the system will detect it as different card numbers according to every format; user only requires choosing the item equivalent to the actual card number, and sets the format as the Wiegand format for the device. This function is also applicable to card reading function and auxiliary Wiegand reader.

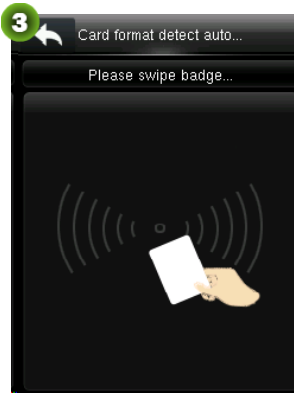


After entering automatic detection, swipe the badge in badge swiping area (on this device or reader).

Card number obtained based on the IntWiegand26 format parsing

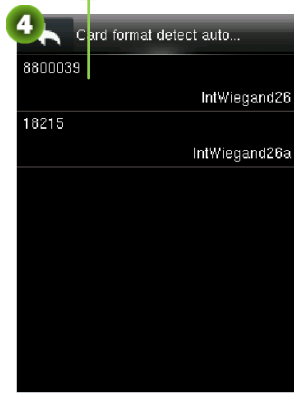

The Wiegand format and parsed card number are automatically detected.

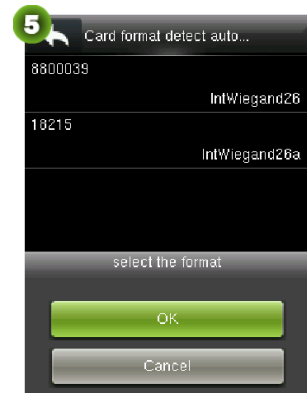

Select the number consistent with the actual card number, and the corresponding format is the Wiegand format which should be selected for reading this type of card.


6 System Settings

Set system parameters, including date and time, access logs★, finger vein parameters, factory settings restoration, and USB disk upgrade, so that the device meets user requirements to the maximum extent in functions and display.



6.1 Date/Time Settings

Set the date and time of the device.

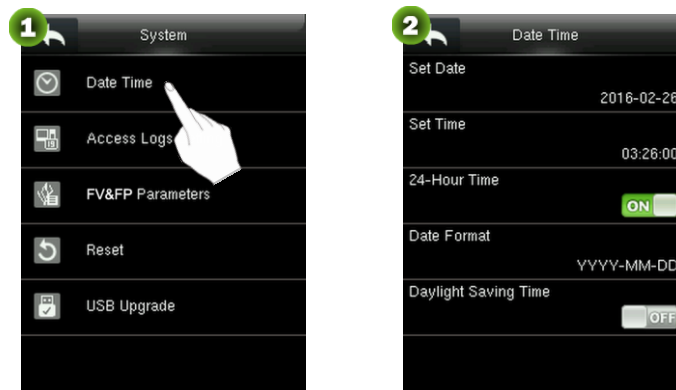

Date and Time: Set the date and time of the device.

24-Hour Time: Set a display format of time on the main interface. Select **ON** so that the time is displayed in 24-hour system, or select **OFF** so that the time is displayed in 12-hour system.


Date Format: Set the format of time displayed on all interfaces of the device.



6.1.1 Daylight Saving Time

DST, which is also called **Daylight Saving Time**, is a system adjusting local time in order to save energy. The time adopted during the set dates is called "DST". Usually, the time will be one hour forward in summer. This enables

users to sleep or get up earlier, and also reduce device's lighting to save power. In autumn, the time will resume the standard time. Regulations are different in different countries. At present, nearly 110 countries adopt DST.

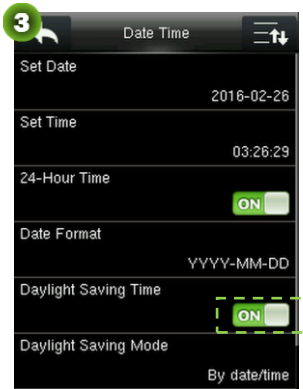To meet the demand of DST, a special option can be customized. Make the time one hour forward at XX (hour) XX (day) XX (month), and make the time one hour backward at XX (hour) XX (day) XX (month)



On the **Personalize** Interface, click **User Interface** to enter an interface, and click  to scroll down the screen to display more content. (Note: You can click  again to scroll up the screen.)

Press Date Time > Daylight Saving Time to enter the Daylight Saving Time settings interface, and then press **[Daylight Saving Time]** to enable Daylight Saving Time; which is shown as above figure3..


Daylight Saving Mode: Daylight Saving Time Mode, by date/time mode and by week/day mode for selection.

Daylight Saving Setup: Set date/time or week/day of the Daylight Saving Time according to the selection in Daylight Saving Mode.


How to set the Daylight Saving Time?

For example, adjust the clock forward one hour at 08: 00 on April 1 and backward one hour at 08: 00 on October 1 (the system turns back to the original time).

- **By date/time mode:**

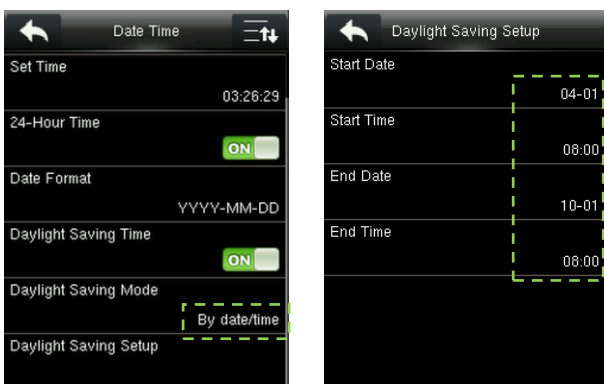


- **By week/date mode:**

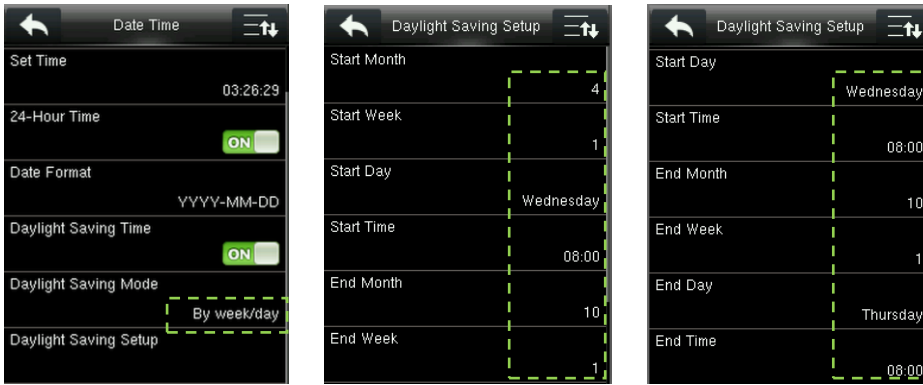

Remarks:

1. If the month when DST starts is later than that when DST ends, DST spans two different years. For example, the DST start time is 2014-9-1 4:00 and the DST end time is 2015-4-1 4:00.
2. Assume that the week/day mode is selected in [Daylight Saving Mode] and the DST starts from Sunday of the sixth week of September in 2013. According to the calendar, September of 2014 does not have six weeks but has five weeks. In this case, in 2014, DST starts at the corresponding time point of the last Sunday of September.
3. Assume that the DST starts from Monday of the first week of September in 2014. According to the calendar, the first week of September in 2015 does not have Monday. In this case, the DST starts from the first Monday of September in 2015.

6.2 Access Logs Setting★

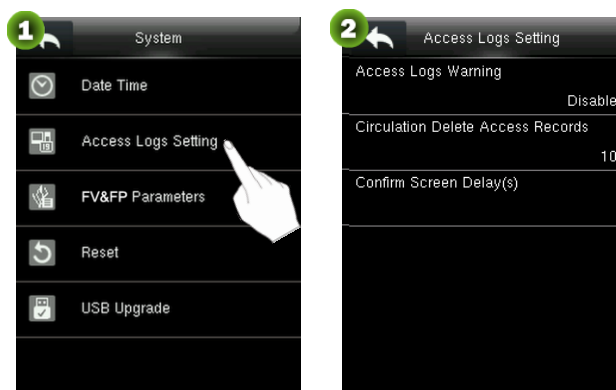


Access Logs Warning: When the residual record capacity is smaller than the preset value, the device automatically generates a message indicating residual record capacity. You can set it to **Disabled** or set to a value ranging from 1 to 9999.

Circulation Delete Access Records: Set the number of log entries that can be deleted at a time when existing records reach the allowed maximum log capacity. The default value is **Disabled**. You can set it to a value ranging from 1 to 999.

Confirm Screen Delay(s): Set the duration to display messages of verification results. The valid value range is 1-9.

6.3 FV&FP★ Parameter Setting

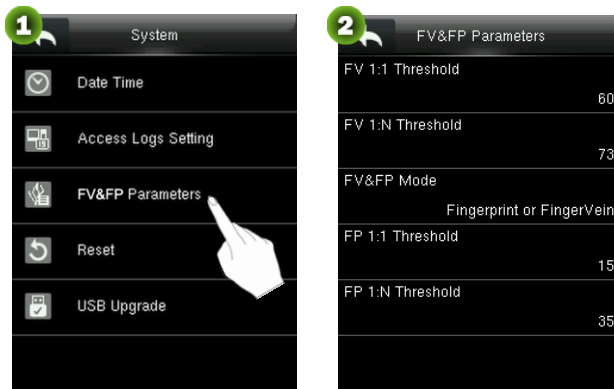

FV 1:1 Threshold: Set the similarity between the finger vein image collected currently and the enrolled finger vein images in the device in 1:1 verification mode. The default value is 60, and you can set it to a value ranging from 55 to 75. When the similarity reaches the set level, the verification is passed. The higher the threshold is, the lower the misjudgment rate is and the higher the false rejection rate is, and vice versa.


FV 1:N Threshold: Set the similarity between the finger vein image collected currently and the enrolled finger vein images in the device in 1:N verification mode. The default value is 70, and you can set it to a value ranging from 65 to 85. When the similarity reaches the set level, the verification is passed. The higher the threshold is, the lower the misjudgment rate is and the higher the false rejection rate is, and vice versa.

Recommended match thresholds:

| False Rejection Rate | Misjudgment Rate | Match Threshold | |
|----------------------|------------------|-----------------|-----|
| | | 1:N | 1:1 |
| High | Low | 85 | 75 |
| Medium | Medium | 70 | 60 |
| Low | High | 65 | 55 |

FV&FP Mode: Fingerprint or Finger Vein mode is selected by default. You can select the **FV & FP Mode** as **Fingerprint and Finger Vein**.

- **Fingerprint or Finger Vein Mode:** Verification is passed when either a fingerprint verification or a finger vein verification are passed.
- **Fingerprint and Finger Vein Mode:** Verification is passed when both a fingerprint verification and a finger vein verification are passed.

 **Note:** The **FV&FP Mode** can be modified only when there is no any data exists in the system. If some data exist, you need to delete all the data before modify the **FV & FP Mode**.

FP 1:1 Threshold★: Set the similarity between the fingerprint image collected currently and the enrolled fingerprint images in the device in 1:1 verification mode. The default value is 15, and you can set it to a value ranging from 10 to 35. When the similarity reaches the set level, the verification is passed. The higher the threshold is, the lower the misjudgment rate is and the higher the false rejection rate is, and vice versa.


FP 1:N Threshold★: Set the similarity between the fingerprint image collected currently and the enrolled fingerprint images in the device in 1:N verification mode. The default value is 35, and you can set it to a value ranging from 25 to 50. When the similarity reaches the set level, the verification is passed. The higher the threshold is, the lower the misjudgment rate is and the higher the false rejection rate is, and vice versa.


Recommended match thresholds:

| False Rejection Rate | Misjudgment Rate | Match Threshold | |
|----------------------|------------------|-----------------|-----|
| | | 1:N | 1:1 |
| High | Low | 45 | 25 |
| Medium | Medium | 35 | 15 |
| Low | High | 25 | 10 |

6.4 Reset to Factory Settings

Reset data such as communication settings and system settings to factory settings.

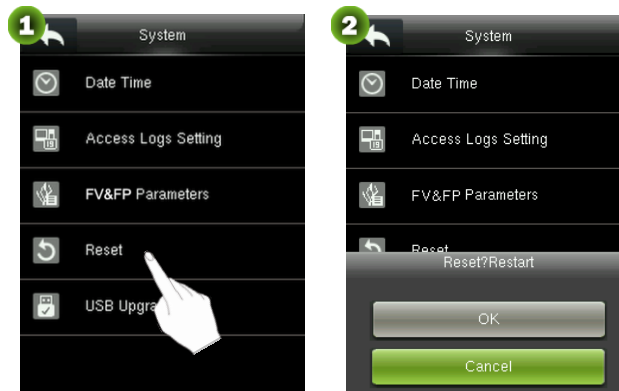


 **Note:** After reset, the user information in the device and the settings on the access control interface are not deleted.

6.5 USB Upgrade

This function enables the device firmware to be upgraded with an upgrade file in a USB disk.


Insert a USB disk into the USB port, and click **USB Upgrade** to upgrade the firmware.

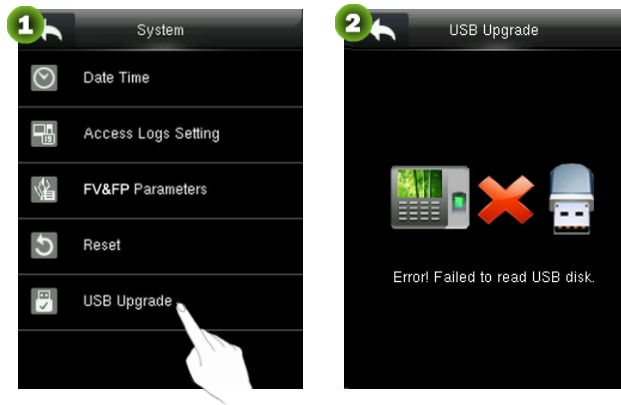

 **Notes:**



- (1) If no USB disk is inserted, a message as shown in **Figure 2** is displayed.
- (2) If an upgrade file is needed, please contact out technical support. Firmware upgrade is not recommended under normal circumstances.

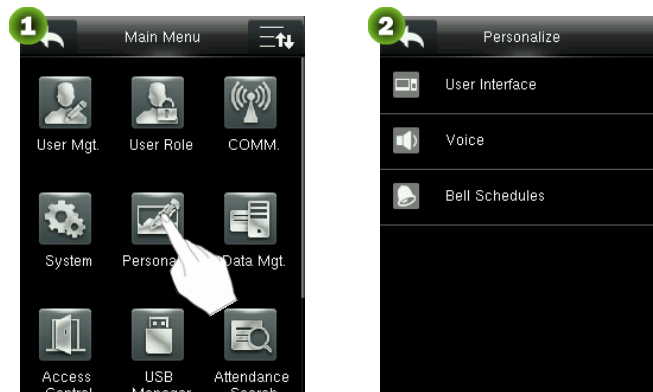7 Personalize Settings



7.1 User Interface Settings



You may customize the display style of the home interface.

On the **Personalize** Interface, click **User Interface** to enter an interface, and click  to scroll down the screen to display more content. (Note: You can click  again to scroll up the screen.)




- **Wallpaper**

Select the wallpaper of main screen as required, you can find wallpapers of various styles in the device. The detailed operation is as follows:

1. Click **Wallpaper**.
2. Click an image (**Figure 4**) to enter the **Wallpaper Preview** interface.
3. Eight wallpapers are stored in the device. To select one, click  /  and then click **Set** (**Figure 5**). After setting, the device returns to the **Wallpaper** interface.

Click  (**Figure 6**) to save the setting and return to the **User Interface** interface.

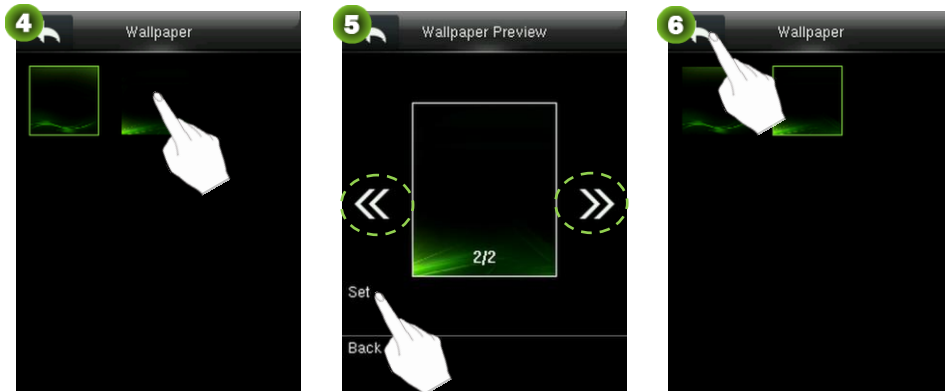

- **Language:** Select the language of device as required.

- **Menu Screen Timeout (s)**

When there is no operation in the menu interface and the time exceeds the set value, the device will automatically exit to the initial interface. You can disable it or set the value to 60~99999 seconds.

- **Idle Time To Slide Show (s)**

When there is no operation in the initial interface and the time exceeds the set value, a slide show will be shown. It can be disabled (set to "None") or set to 3~999 seconds.

- **Slide Show Interval (s)**

This refers to the interval between displaying different slide show pictures. It can be disabled or set to 3~999 s.

- **Idle Time To Sleep (m)**

When there is no operation in the device and the set Sleep Time is attained, the device will enter standby mode. Press any key or finger to cancel standby mode. You can disable this function, or set the value to 1~999 minutes. If this function is turned to **[Disabled]**, the device will not enter standby mode.

- **Main Screen Style**


The detailed operation is as follows:

1. Click **Main Screen Style** to enter the setting interface.
2. Click **◀▶** to switch and select a style, and then click **Set (Figure 8)**. After setting, the device returns to the **Wallpaper** interface.




7.2 Voice Settings

Click **Voice** to enter the setting interface.

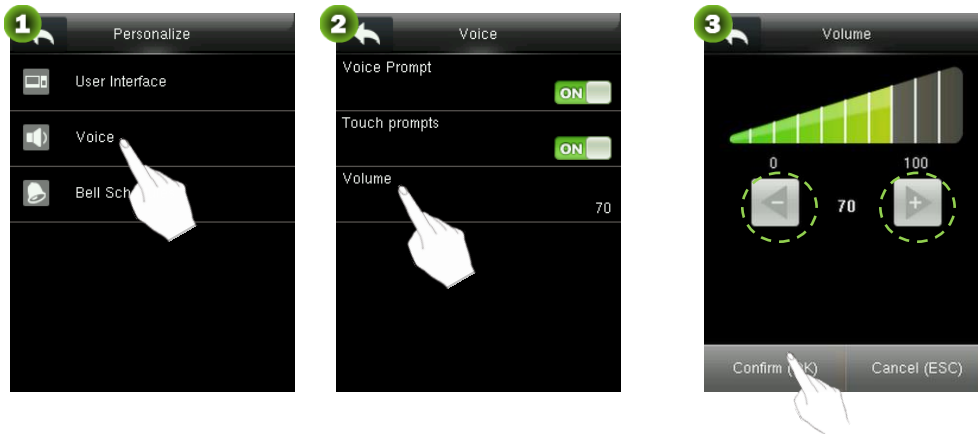

Voice Prompt: Select whether to enable voice prompts during operating. The default value is **ON**, indicating that voice prompt is enabled. You may click it to switch between **ON** and **OFF**. The icon **OFF** indicates that voice prompt is disabled.


Touch Prompts: Select whether to enable voice while touch the screen. The default value is **ON**, indicating that keyboard prompt is enabled. You may click it to switch between **ON** and **OFF**. The icon **OFF** indicating that keyboard prompt is disabled.

Volume: Set the volume of device. The default value is 70. Click **Volume** to enter the setting interface. Click   to turn down/up the volume, then click **Confirm (OK)** (see **Figure 4**) to save and return to the **Voice** interface.

7.3 Bells Settings


Many companies choose to use bells to signify on-duty and off-duty time. When reaching the scheduled time for bell, the device will play the selected ringtone automatically until the ringing duration is passed.

Click **Bell Schedules** to enter the **Bell Schedules** interface.

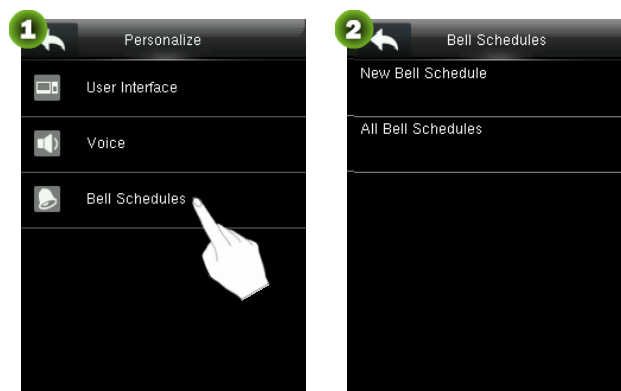

7.3.1 New Bell Schedule

1. Click **New Bell Schedule** to enter the **New Bell Schedule** interface (see **Figure 4**).

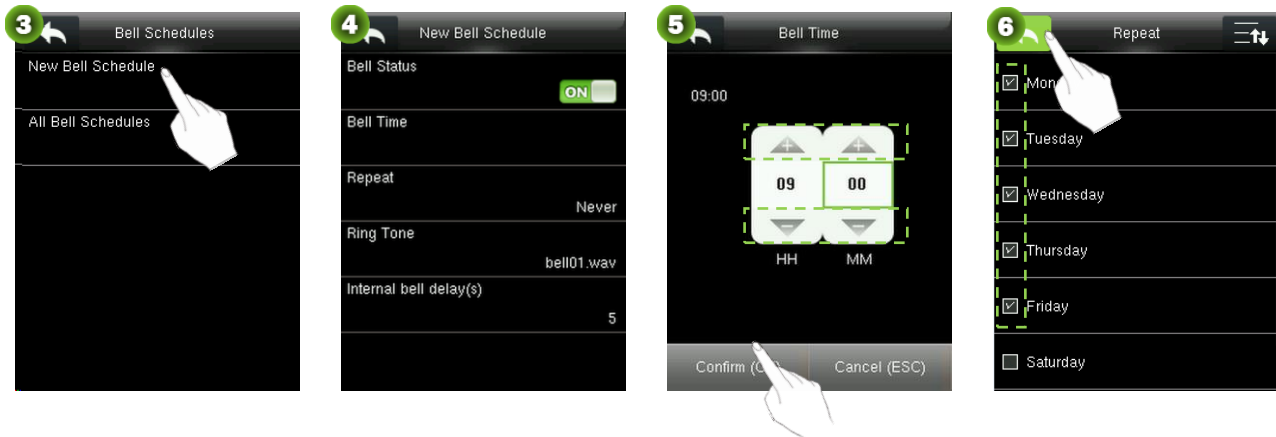

2. You may set the parameters as needed. The detailed operation is as follows:

- **Bell Status**

The default value is **OFF**, indicating that bell status is disabled. Click it to switch between **ON** and **OFF**. The icon **ON** indicates bell status is enabled.

Notes: The schedule is effective only after the bell status is set to **ON**.

- **Bell Time**


Set the start time for a bell.

Click **Bell Time** to enter the **Bell Time** interface.

(2) Set the bell time by clicking  to increase/decrease numbers, and click **Confirm (OK)** (see **Figure 6**) to save and return to the **New Bell Schedule** interface.

- **Repeat**


The default value is **Never**, which is used for a one-time bell schedule.

To repeat using a bell schedule, click **Repeat** to enter the **Repeat** interface. Tick one or multiple dates requiring a bell schedule, and click  (see **Figure 6**) to save the settings and return to the **New Bell Schedule** interface. When the selected dates and bell time come, relay signals are triggered and the set bell is played. When the bell duration is up, the bell stops automatically.

- **Ring Tone**


Set a ring tone for the bell schedule.

Click **Ring Tone** to enter the **Ring Tone** interface.

(2) In the ring tone list, click a ring tone to select it, and click  (see **Figure 8**) to save the settings and return to the **New Bell Schedule** interface.

- **Internal Bell Delay(s)**


Set the bell delay. The default value is 5 seconds. You may set it to a value ranging from 1 to 999.

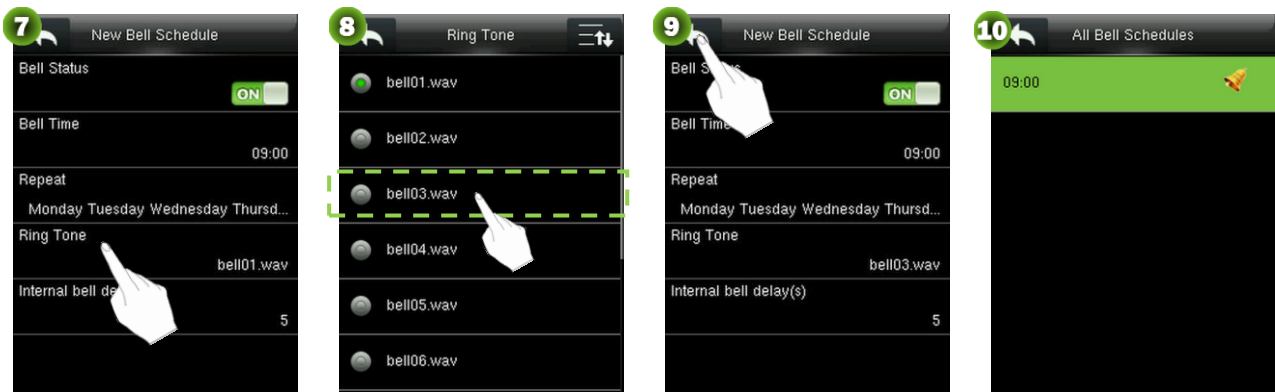

3. After setting, click  in the **New Bell Schedule** interface (**Figure 9**) to save the settings and return to the previous interface.

7.3.2 All Bell Schedules

In the **Bell Schedules** interface, click **All Bell Schedules** to enter the interface as shown in **Figure 10**. You may edit/delete bell schedules as needed.

 **Note:** The method of editing/deleting bell schedules is the same with that of editing/deleting users. For details, see [3.2.2 Editing/Deleting a User](#).



8 Data Mgt.


In the **Main Menu** interface, click **Data Mgt.** to enter the **Data Mgt.** interface.



8.1 Delete Data

Manage data in the device, which includes deleting attendance data, deleting all data, deleting admin role and deleting screen savers etc.

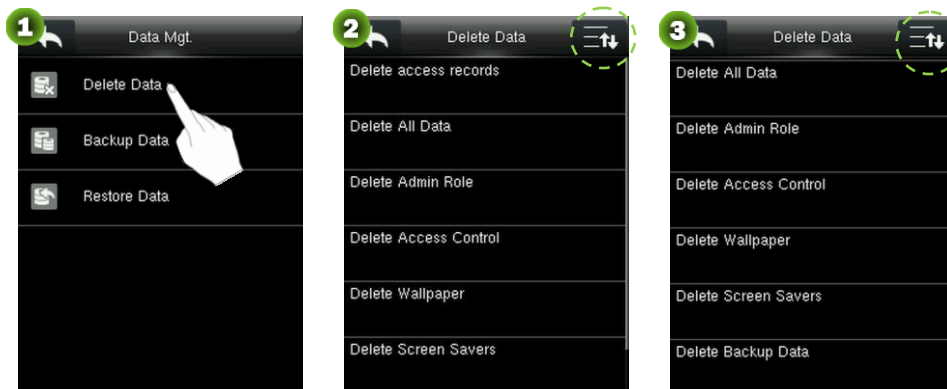

Click **Delete Data** to enter the **Delete Data** interface, and click  to scroll down the screen to display more content. (Note: You can click  again to scroll up the screen.)




- **Delete Access Records**★: Delete all the access records.
- **Delete All Data**: Delete all user information, finger vein information and attendance logs, etc.
- **Delete Admin Role**: Make all Administrators become **Normal Users**.
- **Delete Access Control**: Restore the access control settings, such as holidays, user permissions, time rules, user groups, to the factory default settings. The access records will not be deleted.
- **Delete Wallpaper**

Delete wallpapers. The specific operations are as follows.

1. Click **Delete Wallpaper**.

2. Click  /  to switch and select a wallpaper, and then click **Delete Selected Picture** to delete the selected picture or click **Delete All Pictures** to delete all pictures.

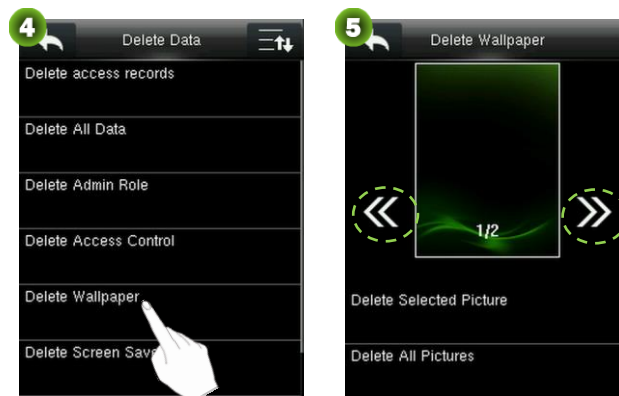


- **Delete Screen Savers**

The method of deleting screen savers is the same as that of deleting wallpapers. (For details about how to upload screen savers, see [10.2 USB Upload](#).)

- **Delete Backup Data:** Delete all backup data.

8.2 Backup Data

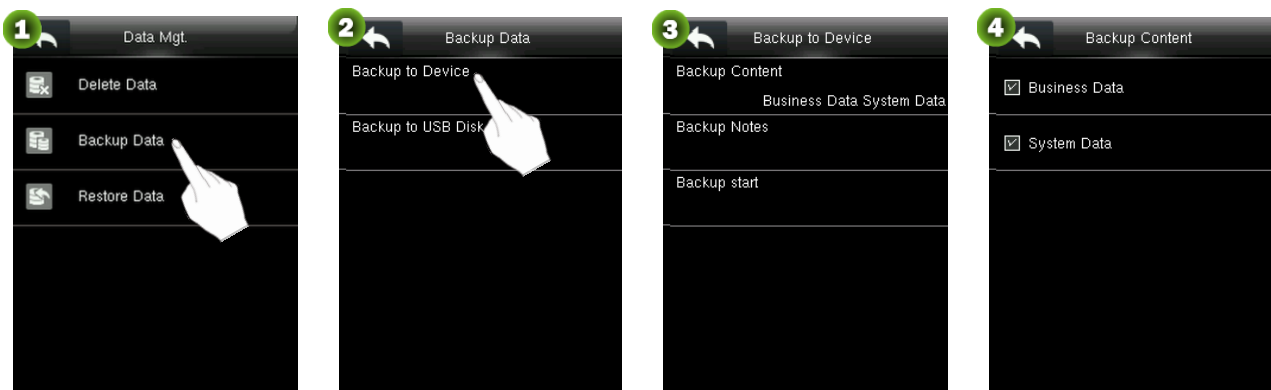

- **Backup to Device**

You may back up the business data or configuration data in the device to the local PC.

1. Click **Backup to Device** to enter the **Backup to Device** interface.
2. You may set the parameters as needed. The detailed operation is as follows:

Backup Content: Click **Backup Content** to enter the **Backup Content** interface. Select content to be backed up. (**Note:** The icon indicates a chosen item.)

Backup Notes: Enter backup content. The detailed method is as follows:

Click **Backup Notes** to enter the **Backup Notes** interface (see **Figure 5**).

② Click on the screen. A keyboard is prompted. Enter note using the T9 input method, and then click **OK** (see **Figure 6**) to confirm and return to the **Backup Notes** interface.

③ Click **Confirm (OK)** (see **Figure 7**) to save the settings and return to the **Backup to Device** interface.



3. After setting, click **Backup Start** to start backing up content to the device.

● Backup to USB Disk


Back up the business data or configuration data in the device to a USB disk. The method is the same as that used in **Backup to Device**.

Notes:

- (1) Before backing up data to a USB disk, please insert a USB disk into the USB port of the device.
- (2) Before backing up data to a local PC, the system replaces the old backup data with the most updated one.

8.3 Restore Data

On the **Data Mgt.** interface, click **Restore Data** to enter the **Restore Data** interface.

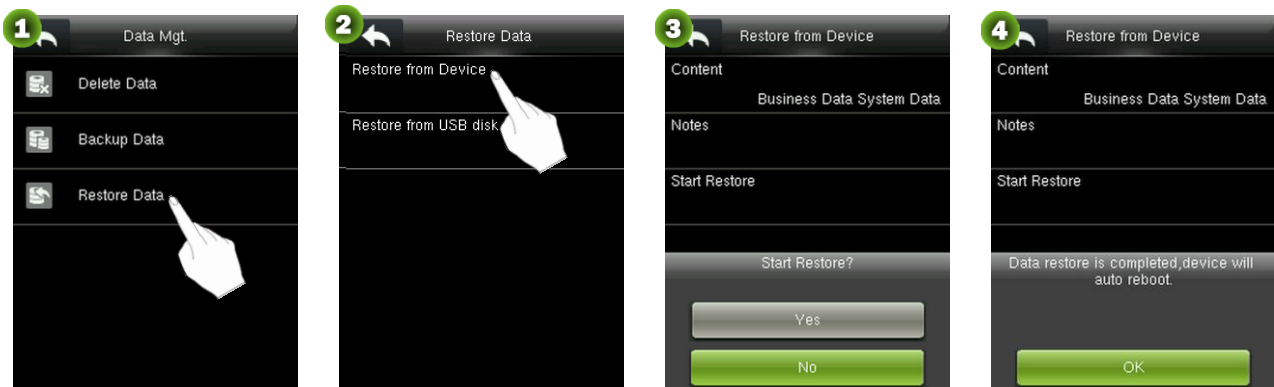

● Restore from Device

Restore the data in the device from the local PC.


1. Click **Restore from Device** to enter the **Restore from Device** interface.

2. Click **Start Restore**, and a dialog (see **Figure 3**) is prompted. Click **Yes** to start.

 **Note:** After restoration, click **OK** to restart the device.


- **Restore from USB Disk**

Restore the data in the device from a USB disk. The detailed operation is the same as that used in **Restore from Device**.

 **Note:** Before restoring data from a USB disk, insert the USB disk carrying backup data into the USB port of the device.

9 Access Control

The settings of access control function are for the users' access periods and the parameters of the control lock and related device.

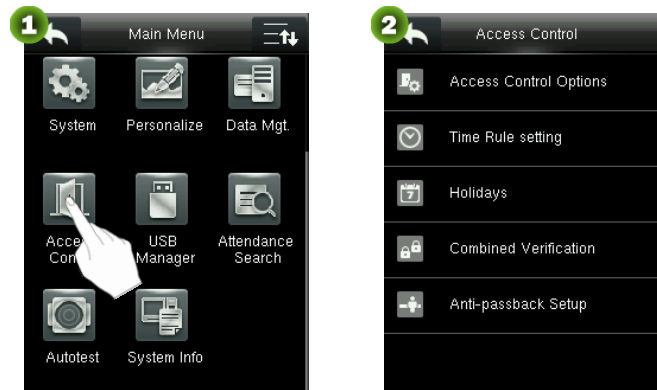


To gain access, the registered user must meet the following conditions:

1. User's access time falls within either user's personal time zone or group time zone.
2. User's group must be in the access combo (when there are other groups in the same access combo, verification of members of those groups are also required to unlock the door).

In default settings, new users are allocated into the first group with the default group time zone and access combo as "1", and set in unlocking state.

9.1 Access Control Options Settings

In the **Access Control** interface, click **Access Control Options** to enter the **Access Control Options** interface, and click  to scroll down the screen to display more content. (**Note:** You can click  again to scroll up.)

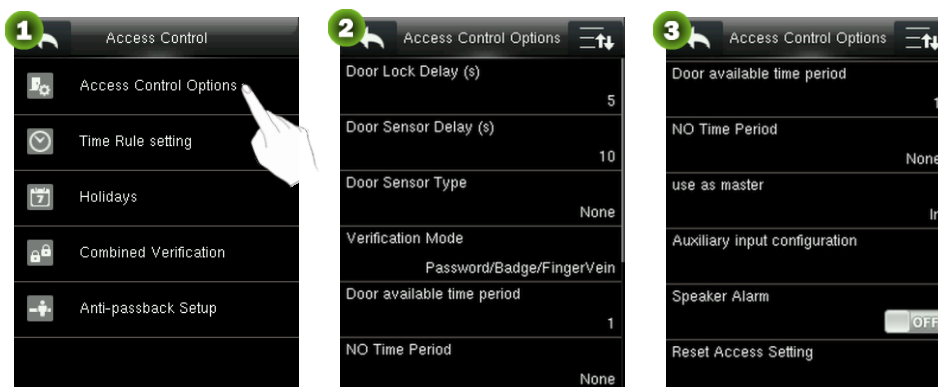

Set the parameters of the control lock and related devices.

Door Lock Delay (s): The period of time of unlocking (from door opening to closing automatically) after the electronic lock receives an open signal sent from the device (value ranges from 0 to 10 seconds).

Door Sensor Delay (s): When the door is opened, the door sensor will be checked after a time period; if the state of the door sensor is inconsistent with that of the door sensor mode, alarm will be triggered. The time period is the **Door Sensor Delay** (value ranges from 0 to 255 seconds).

Door Sensor Type: It includes **No**, **Normally Open** and **Normally Closed**. **No** means door sensor is not in use; **Normally Open** means the door is opened when electricity is on; **Normally Closed** means the door is closed when electricity is on.

Verification Mode: You may select **Password/Finger Vein, Badge Only**, **Password, Finger Vein**, **Password & Finger Vein, Badge/Fingerprint ★**, **Fingerprint Only ★**, **Badge Only ★**, **Fingerprint & Password ★**, **Badge & Password ★**, **Badge & Fingerprint ★** or **Badge & Fingerprint & Password ★** as needed.

Door Available Time Period: Set periods to open the door for users.

NO Time Period: Select a time period as the NO time period.

Use as master: While configuring the master and slave devices, you may set the state of the master as **Out** or **In**.

Out: A record of verification on the master device is a check-out record.


In: A record of verification on the master device is a check-in record.

Auxiliary Input Configuration★: Set the **Aux output/lock open time** and **Aux Output type** for the device with auxiliary connector. **Aux Output type** includes **None**, **trigger door open**, **trigger Alarm**, and **trigger Door open and Alarm**.

Speaker Alarm: When the **[Speaker Alarm]** is enabled, the speaker will raise an alarm when the device is being dismantled.

Reset Access Setting: Reset parameters of door lock delay, door sensor delay, door sensor type, NO time period, auxiliary input configuration, excluding the access data to be deleted in **Data Mgt**.



| Access Parameters | Factory Default |
|-------------------------------|-----------------|
| Door Lock Delay | 5s |
| Door Sensor Delay | 10s |
| Door Sensor Type | NO |
| NO Time Zone | None |
| Auxiliary Output Access Time★ | 255s |

 **Remarks:** After setting **NC Time Period**, please lock the door well, otherwise alarm might be triggered during **NC Time Period**.

9.2 Time Rule Settings

Time Rule is the minimum time unit of access control settings; at most 50 **Time Rules** can be set for the system. Each **Time Rule** consists of 7 time sections (a week) and 3 holiday time sections, and each time section is the valid time within 24 hrs.

You may set a maximum of 3 time periods for every time section. The relationship among these time periods is "or". When the verification time falls in any one of these time periods, the verification is valid. The time period format is HH:MM-HH:MM in the 24-hour system with precision to seconds.


On the **Access Control** interface, click **Time Rule Setting** to enter the **Time Rule** interface, and click  to scroll down the screen to display more content. (Note: You can click  again to scroll up the screen.)



- **Editing a Time Rule**


A super administrator may edit time rules as needed. The detailed operation is as follows:


1. Click the query box (see **Figure 2**) to enter the **Search Rule** interface.
2. Enter a time rule number, click **OK** (see **Figure 3**) to enter the **Time Rule** interface (see **Figure 4**).
3. In the time sections list, click a time section to be edited (see **Figure 5**) to enter the **Time Schedule** interface (see **Figure 6**).

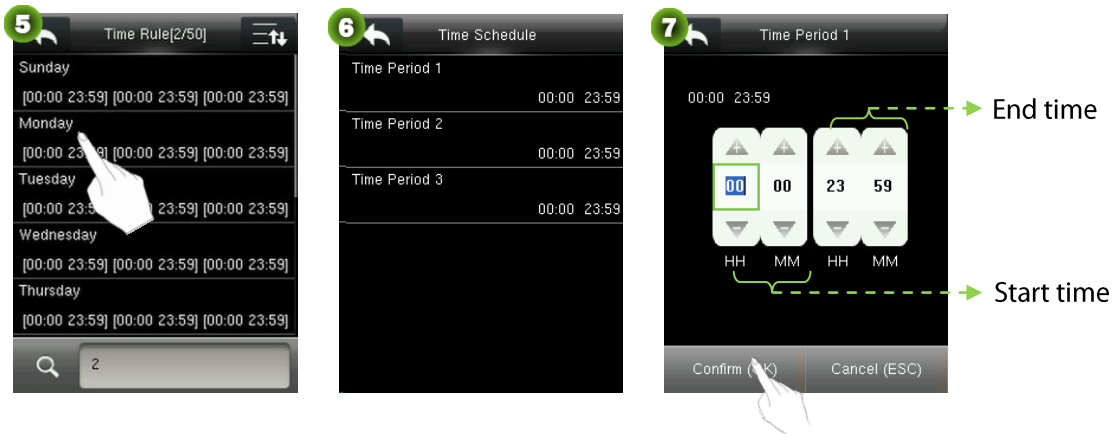

4. In the listed time periods, click **Time Period 1/2/3** to enter the setting interface. You may set the start time and end time of a time period as needed.

 **Tips:** Click the icon  to increase/decrease numbers while setting time period.

5. After setting, click **Confirm (OK)** (see **Figure 7**) to save the settings and return to the **Time Schedule** interface, and click  (see **Figure 8**) to save the settings and return to the **Time Rule** interface.

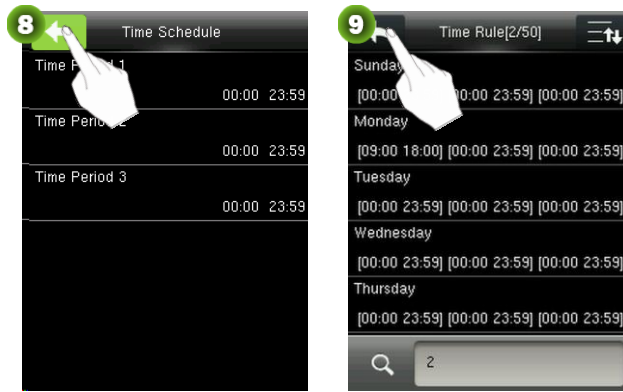


6. Set the other time sections of the time rule. Click  (see **Figure 9**) on the **Time Rule** interface to save the settings and return to the upper-level interface.

Notes:

- (1) When the end time is earlier than the start time (for example, 23:57-23:56), this means closing all day long. When the end time is later than the start time (for example, 00:00-23:59), this means that this time period is valid.
- (2) **Valid Time Period:** 00:00-23:59 (Whole-day valid) or when the end time is later than the start time.
- (3) By default, time rule 01 indicates full-day opening.


9.3 Holidays Settings

Add access control holidays for the device and set time periods on holidays as needed. The device controls the access control on holidays according to the holiday settings.

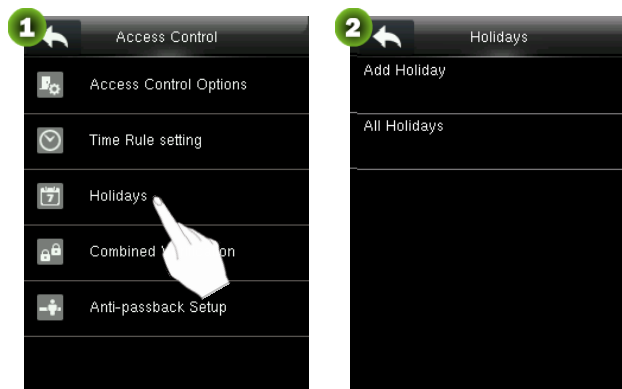

9.3.1 Add Holiday

1. Click **Add Holiday** to enter the **Holidays** interface (see **Figure 4**).

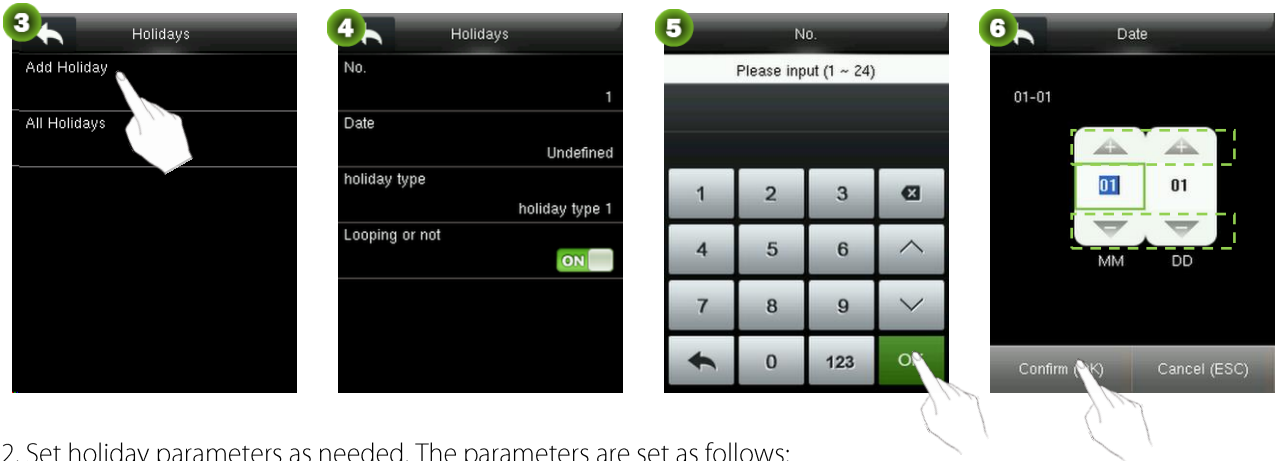

2. Set holiday parameters as needed. The parameters are set as follows:

- **No.**

The device automatically assigns a number to a holiday. Click **No.** to enter the **No.** interface. Enter a holiday No. as needed and click **OK** (see **Figure 5**) to save the settings and return to the **Holidays** interface.

Note: A holiday No. ranges from 1 to 24.

- **Date**

Set the date of a holiday.

(1) Click **Date** to enter the **Date** interface.


(2) Click to increase a number upwards or click to decrease a number downwards to set the date. Then, click **Confirm (OK)** (see **Figure 6**) to save the settings and return to the **Holidays** interface.

- **holiday type**

Set the type of a holiday.

(1) Click **holiday type** to enter the **holiday type** interface.

(2) Select a holiday type and click (see **Figure 8**) to save the settings and return to the **Holidays** interface.

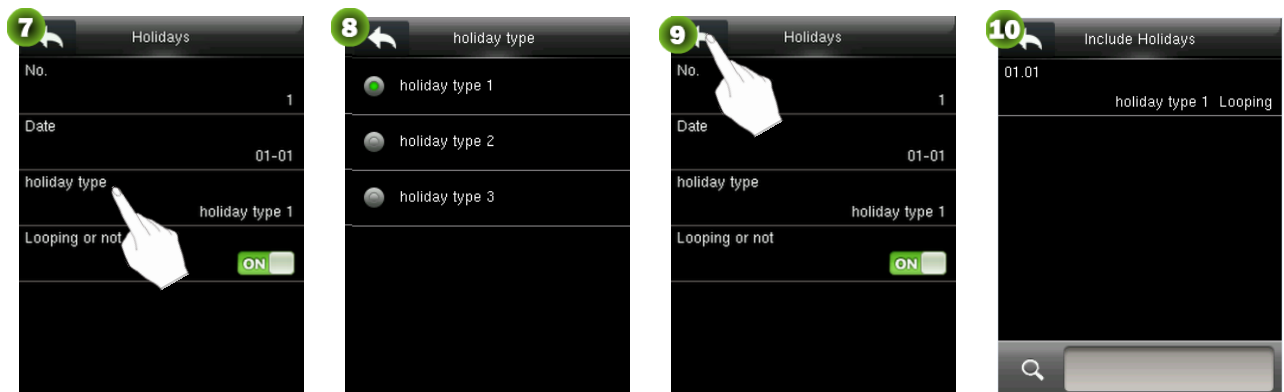

- **Looping or not**

The default value of **Looping or not** is **ON**. You can click **Looping or not** to switch between **ON** and **OFF**.


For fixed holidays every year, for example, the New Year's Day is January 1, **Looping or not** can be set to **ON** for them. For unfixed holidays every year, for example, the Mother's Day is the second Sunday of May, the specific dates are uncertain and **Looping or not** can be set to **OFF** for them.

For example, when the date of a holiday is set to January 1, 2010 and **holiday type** is set to **holiday type 1**, the access control on January 1 is conducted according to the time period settings of **holiday type 1** rather than the time period settings of Friday.

After setting, click  on the **Holidays** interface (see **Figure 9**) to save the settings and return to the upper-level interface.

9.3.2 Include Holidays

On the **Holidays** interface shown in Figure 3, click **All Holidays** to enter the **Include Holidays** interface (see **Figure 10**). You can edit or delete holidays as needed.

 **Note:** The methods of editing or deleting a holiday are the same as those of editing or deleting a user and are not described here. For details, see [3.2.2 Editing/Deleting a User](#).

9.4 Combined Verification Settings

 **Notes:**


(1) The Access3.5 software is not required if the device is used for the first time. You can set combined verification on the device directly.

(2) After combined verification is set on the Access3.5 software and the settings are delivered to the device, the device supports only the combined verification settings delivered from the Access3.5 software and combined verification cannot be set on the device.

Combine two or more members to achieve multi-verification and improve security.

In combined verification, the range of a user number is: $0 \leq N \leq 5$; the users can all belong to a single group, or belong to 5 different groups at most.

On the **Access Control** interface, click **Combined Verification** to enter the **Combined Verification** interface.

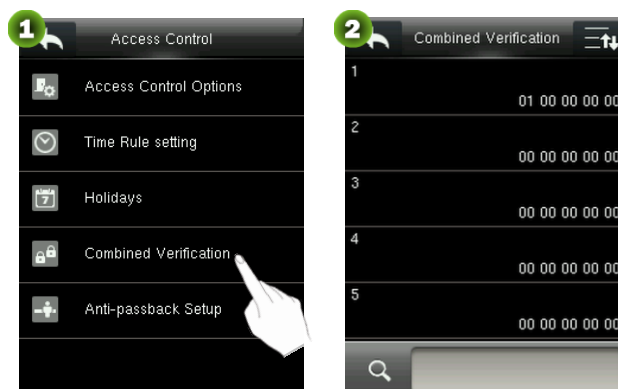


By default, the device supports ten unlocking combinations. Users can modify combined verification settings as needed. The specific operations are as follows:

For example, add an unlocking combination requiring simultaneous verification of user group 1 and user group 2.

1. On the **Combined Verification** interface, click a combination to be modified to enter the interface shown in **Figure 3**.

2. Click ▲ to increase a number upwards or click ▼ to decrease a number downwards to set the ID of a user group. Then, click **Confirm (OK)** to save the settings and return to the **Combined Verification** interface.

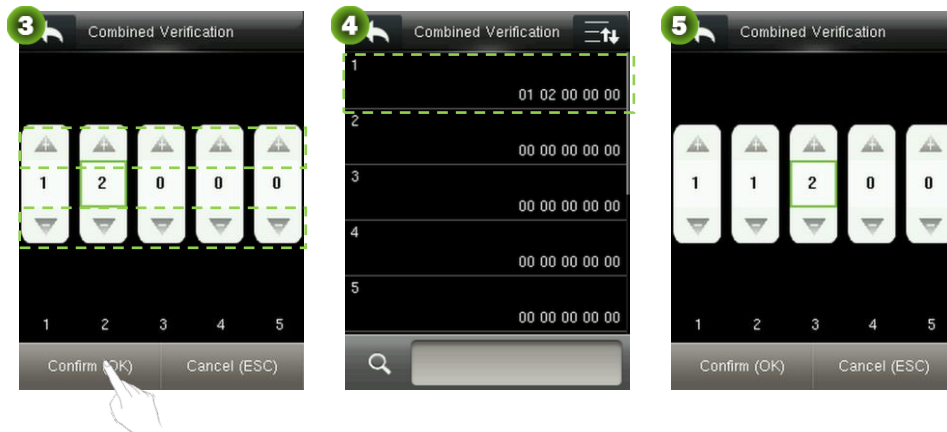



After the setting is successful, a door can be opened only after a user in user group 1 and a user in user group 2 pass the verification.

Notes:

- (1) An unlocking combination supports a maximum of five user groups. That is, in an unlocking combination, a door can be opened only after a maximum of five users pass the verification.
- (2) After an unlocking combination shown in **Figure 5** is set, a door can be opened only after a user in user group 2 and two users in user group 1 pass the verification.
- (3) An unlocking combination is cleared when the IDs of user groups in the unlocking combination are all set to 0.

9.5 Anti-passback Settings

To avoid some persons following users to enter the door without verification, resulting in security problem, users can enable anti-passback function. The check-in record must match with check-out record so as to open the door. This function requires two devices to work together: one is installed inside the door (master device) and the other one is installed outside the door (slave device). The two devices communicate via Wiegand signal. The Wiegand format and Output type (User ID / Badge Number) adopted by the master device and slave device must be consistent.

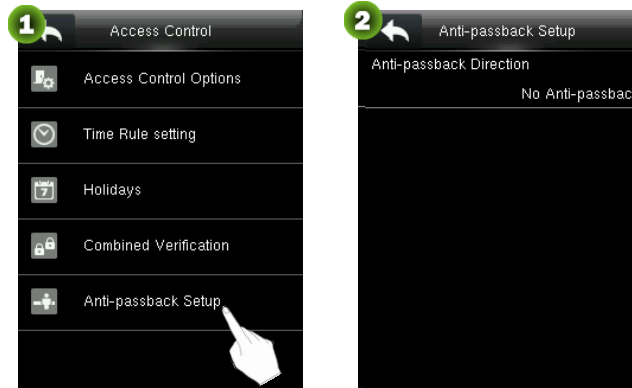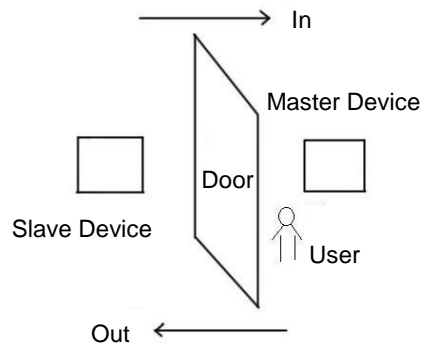

Anti-Passback Direction

No Anti-passback: Anti-Passback function is disabled, which means passing verification of either master device or slave device can unlock the door. Attendance state is not reserved.

Out Anti-passback: After a user checks out, only if the last record is a check-in record can the user check out again; otherwise, the alarm will be triggered. However, the user can check in freely.


In Anti-passback: After a user checks in, only if the last record is a check-out record can the user check in again; otherwise, the alarm will be triggered. However, the user can check out freely.

In/Out Anti-passback: After a user checks in/out, only if the last record is a check-out record can the user check in again, or a check-in record can the user check out again; otherwise, the alarm will be triggered.

10 USB Manager

User information, finger vein templates, fingerprint templates, verification data, and other data can be exported to relevant software for processing through a USB disk, and user information, finger vein templates, and other data can be imported to the device by using a USB disk.

 **Remarks:** Before uploading/downloading data from/to the USB disk, insert the USB disk into the USB slot first.

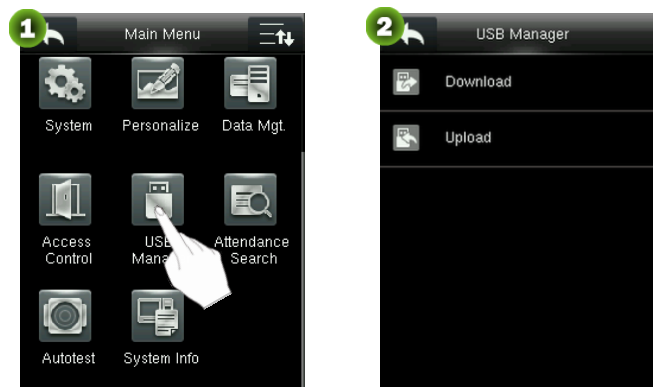


10.1 USB Download


Download access control records ★ and user data in the device to a USB disk.

Download access records ★: Store access control records in a specified date range in the device to a USB disk.

User Data: Download all user information and finger vein information from the device to a USB disk.

The following uses the operation of downloading user data as an example to describe how to download data by using a USB disk.


1. Choose **Download** > **User Data** to start downloading user data to a USB disk. After the downloading is successful, "Download is done" is displayed on the screen (see **Figure 4**).
2. Remove the USB disk and click  to return to the **Download** interface.

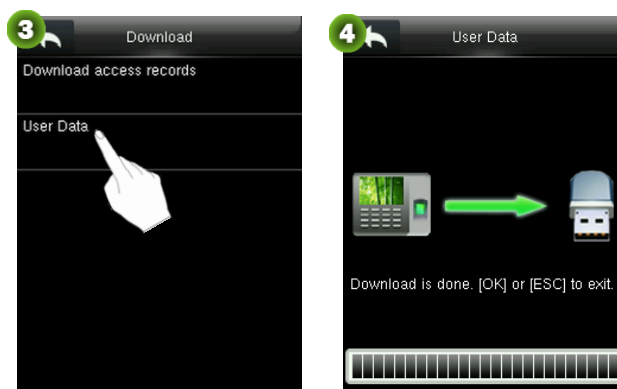

10.2 USB Upload

Upload use data, screen saver pictures, and wallpaper in a USB disk to the device.

Click **Upload** to enter the **Upload** interface.

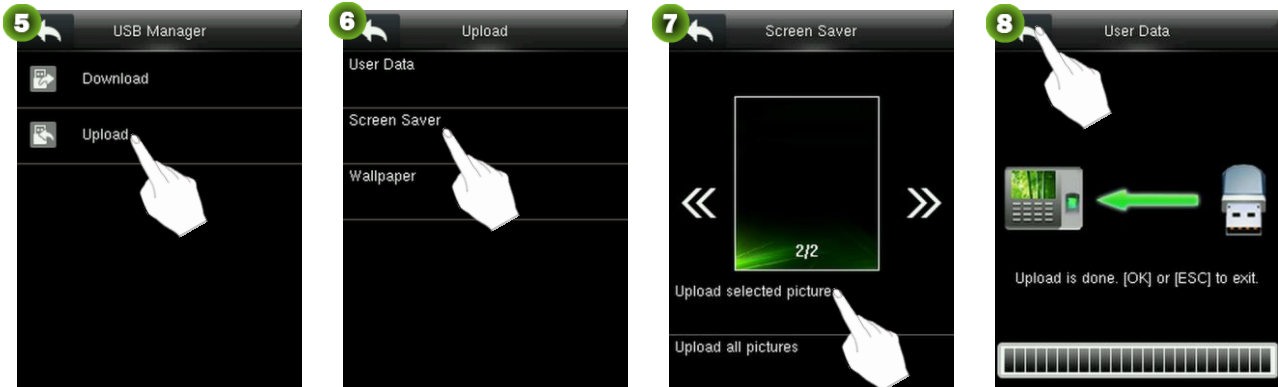

- **User Data:** Upload all the user information from a USB disk to the device.
- **Screen Saver**

Upload screen saver pictures in a USB disk to the device. After the device enters the standby mode, the uploaded screen saver pictures are displayed. The specific operation is as follows:

1. Click **Screen Saver** (see **Figure 6**) to enter the **Screen Saver** interface.
2. Click **◀** / **▶** to switch and select a screen saver picture and click **Upload selected picture** to upload the selected picture to the device, or click **Upload all pictures** to upload all pictures that meet requirements in the **advertise** folder in the USB disk to the device.
3. After the uploading is successful, "Upload is done" is displayed on the screen. Click **←** to return to the upper-level interface.

- **Wallpaper**

Upload all wallpaper from a USB disk to the device. The specific operation method is the same as the method of uploading screen saver pictures and is not described here.


Notes:

- (1) Before uploading screen saver pictures, put the pictures to be uploaded in the **advertise** folder in the USB disk.
- (2) Before uploading wallpaper, put the wallpaper to be uploaded in the **wallpaper** folder in the USB disk.
- (3) Screen saver pictures and wallpaper must be PNG, JPG, or BMP pictures, with the size not larger than 30 KB.
- (4) The names of screen saver pictures and wallpaper contain no more than 20 characters.


11 Attendance Search

The device automatically stores all verification records of users. With the attendance search function, users can query all records conveniently.

1. Click **Attendance Search** in the main menu to enter the **User ID** interface (see **Figure 2**).

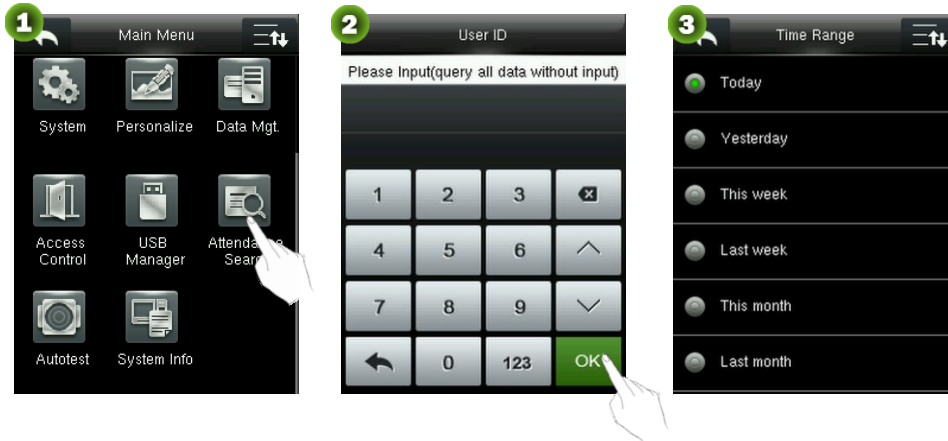


2. Enter a user ID and click **OK** to enter the **Time Range** interface (see **Figure 3**).
3. Click the time range to be viewed as needed, or click **User Defined** to specify the start time and end time of records as prompted, and view relevant records.


 **Note:** If you click **OK** without entering a user ID, verification records of all users in the selected time range are displayed.

12 Autotest


The device automatically tests whether all modules function properly, which include the LCD, voice, fingerprint sensor★and real-time clock (RTC).




Test All: Test the LCD, voice, fingerprint sensor ★, and RTC. During the test, click the screen to continue with the next test or click  to exit the test.

Test LCD: Test the display effect of the LCD screen by displaying full color, pure white, and pure black to check whether the screen displays colors properly. During the test, click the screen to continue with the next test or click  to exit the test.

Test Voice: Test whether the voice files stored in the device are complete and the voice quality is good. During the test, click the screen to continue with the next test or click  to exit the test.

Test Fingerprint Sensor ★: Test whether the fingerprint collector functions properly. During the test, a user presses a fingerprint and checks whether the collected fingerprint image is clear. When a fingerprint is pressed in the collection window, the collected fingerprint image is displayed on the screen in real time. Click the screen or click  to exit the test.

Test Clock RTC: Test the real-time clock. The device tests whether the clock works properly and accurately by checking the stopwatch. Click  to exit the test.

13 System Information



The system information function allows users to view the storage condition of the device and the device version.


Click **System Info** in the main menu to enter the **System Info** interface (see **Figure 2**).



- **Device Capacity**

The device displays the number of registered users, number of administrators, passwords, fingerprints, finger veins, number of registered badge numbers★, and access control records in the device.

Click **Device Capacity** to enter the **Device Capacity** interface. Click  to scroll down the screen to display more content. (Note: You can click  again to scroll up the screen.)

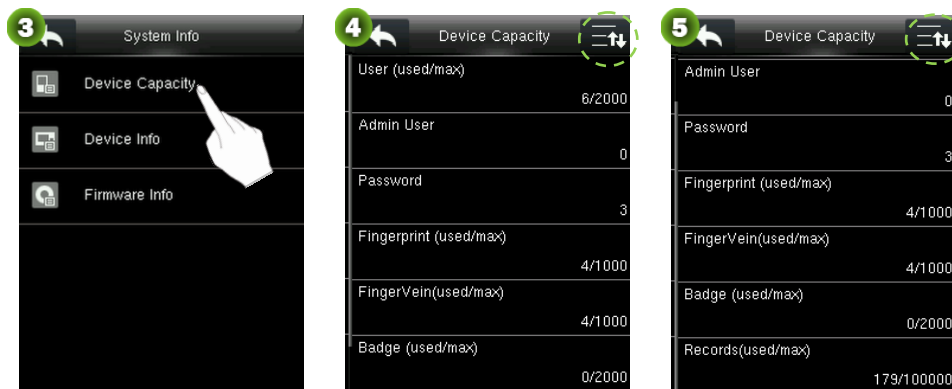

- **Device Info**

Device Info: Display the device name, serial number, MAC address, finger vein algorithm★, platform information, MCU version★, manufacturer, and manufacturer date.


Click **Device Info** to enter the **Device Info** interface. Click  to scroll down the screen to display more content. (Note: You can click  again to scroll up the screen.)



- **Firmware Info**

Display the firmware version, Bio service, push service, pull service and Dev service.


Click **Firmware Info** to enter the **Firmwave Info** interface.

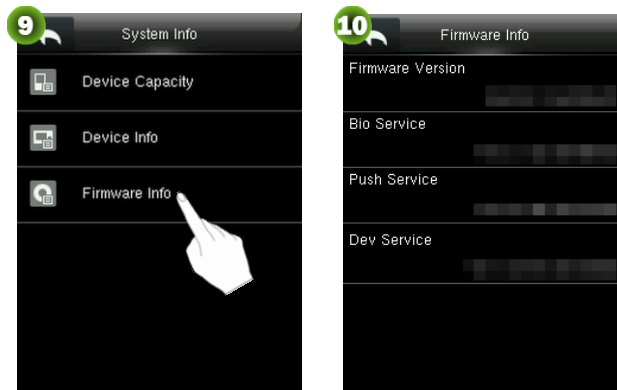

Appendices


Appendix 1 Text Input Operation Instructions

The device supports English, digits, and symbols. Click the place in which texts need to be entered to enter the relevant input interface. For example, click **Name** to enter the **Name** interface.

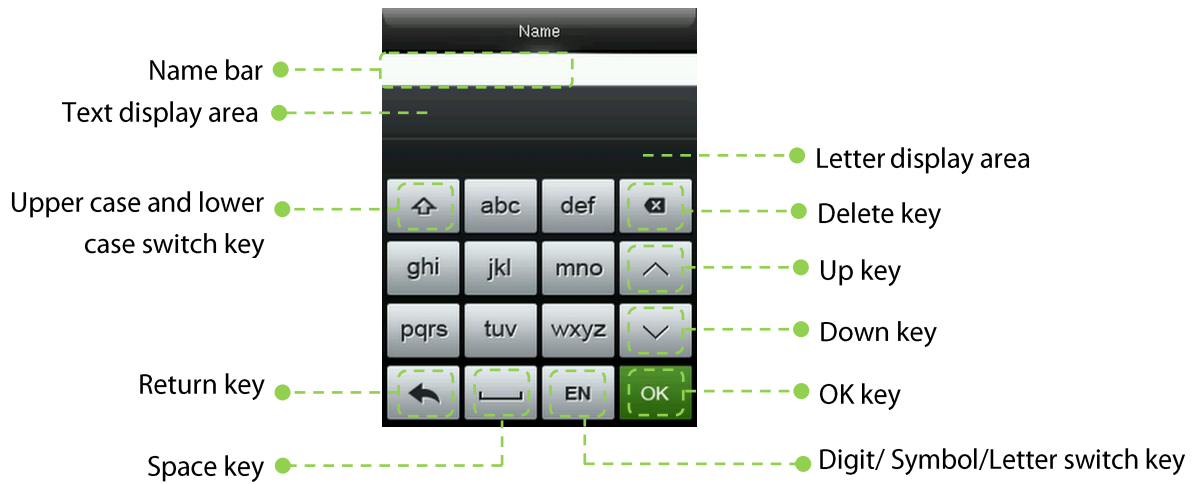



The following steps use the input of "Jack2016#" as an example.



Press  to switch as upper case input method, and press "jkl" key to show "J K L" three letters

Press letter "J", then the letter "J" will show in text display area

Press  to switch as lower case input method, and press "abc" key to show "a b c" three letters

Press letter "a", then the letter "a" will show in text display area. Select "jack" from the text display area or press  to find the required text. You can also enter "c k" directly to fill the text



Press **EN** to switch the input method as digit input method (123)

Input "2016" directly

Press **123** to switch digit input method as symbol input method (@#&)

Input "#", then press **OK** to save the words and return, or press **←** to return directly

Appendix 2 USB

The device serves as a USB host, which can be connected to a USB disk for data exchange.

Traditional finger vein devices support data transmission over RS485 or Ethernet. When the data amount is large, it takes a very long time to transmit data due to limitations of physical conditions. The USB data transmission speed is much faster than any traditional transmission modes. When downloading data using a USB disk, insert the USB disk into device for data downloading and then insert it into a PC to import the data to the PC. In addition, the device supports mutual transmission of user information and finger vein data between two devices, thereby eliminating tedious cable connection for data transmission between traditional devices and PCs.

Appendix 3 Wiegand Introduction

Wiegand26 Protocol is a standard protocol on access control developed by the Access Control Standard Subcommittee affiliated to the Security Industry Association (SIA). It is a protocol used for contactless IC card reader port and output.

The protocol defines the port between the card reader and controller which are widely used in access control, security and other related industries. This has standardized the work of card reader designers and controller manufacturers. The access control devices produced by our company also apply this protocol.

Digital Signal


Figure 1 shows the sequence diagram of the card reader sending digital signal in bits to the access controller. The Wiegand in this diagram follows the SIA access control standard protocol, which targets at 26-bit Wiegand card reader (with a pulse time within 20us to 100us and pulse hopping time within 200 us and 20 ms). Data1 and Data0 signals are high level (greater than Voh) until the card reader is ready to send a data stream. The card reader send

out asynchronous low level pulse (less than v_{ol}), transmitting data stream via Data1 or Data0 wire to access control box (as the sawtooth wave in figure 1). Data1 and Data0 pulses do not overlap or synchronize. Figure 1 shows the maximum and minimum pulse width (successive pulses) and pulse hopping time (the time between two pulses) allowed by the F series fingerprint access control terminals.

Table1: Pulse Time

| Sign | Definition | Card Reader Typical Value |
|------|----------------|---------------------------|
| Tpw | Pulse Width | 100 μ s |
| Tpi | Pulse Interval | 1 ms |

Figure1: Sequence Diagram

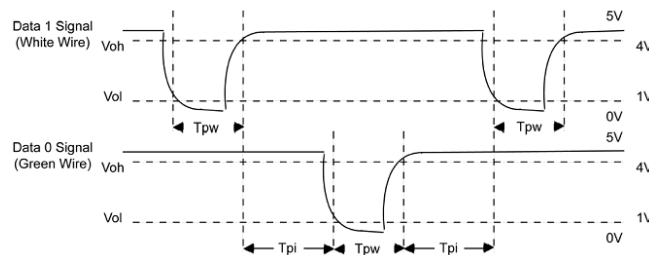

Appendix 3.1 Wiegand 26 Introduction

The system provides the embedded Wiegand 26-bit format.

Composition of the Wiegand 26-bit format: 2-bit parity check bits and 24-bit output content (user ID or card number). The 24-bit binary code can indicate 16 777 216 (0-16 777 215) different values.


| 1 | 2 | 25 | 26 |
|-----------------------|---------------------|----------------------|----|
| Even parity check bit | User ID/Card number | Odd parity check bit | |

The following table describes the fields.


| Field | Description |
|--|--|
| Even parity check bit | The even parity check bit is determined by bits 2-13. If there is an even number of 1's, the even parity check bit is 0. If there is an odd number of 1's, the even parity check bit is 1. |
| User ID/Card number (bit 2 through bit 25) | User ID/Card number (card code, 0-16777215) and bit 2 indicates the most significant bit (MSB). |
| Odd parity check bit | The odd parity check bit is determined by bits 14-25. If there is an even number of 1's, the odd parity check bit is 1. If there is an odd number of 1's, the odd parity check bit is 0. |

Example: A user with the user ID of 12345 has the card number of 0013378512 and the failure ID is set to 1.


1. When the output content is set to user ID, the Wiegand output of the system is as follows after the user passes the verification.

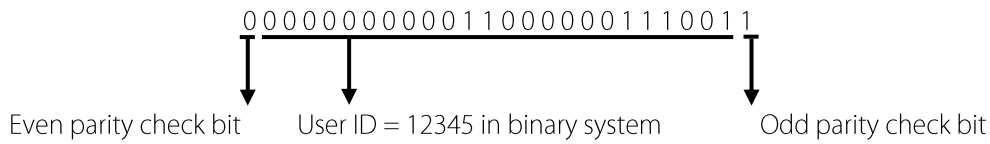

2. When the output content is set to card number, the Wiegand output of the system is as follows after the user passes the verification.

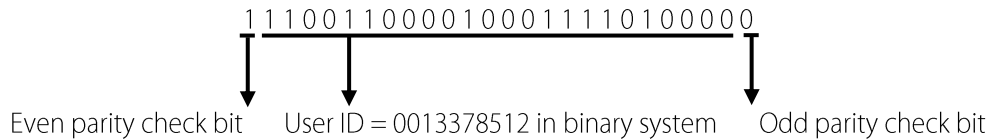

3. When the verification fails, the Wiegand output of the system is as follows:

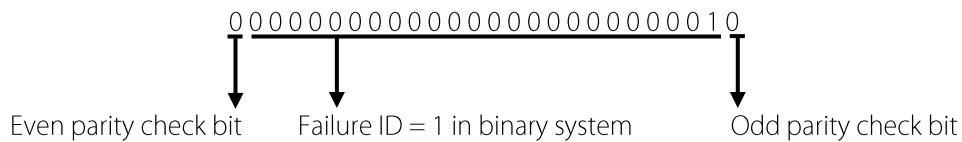

Note: When the output content is beyond the preset range of the Wiegand format, the low-order bits are reserved and high-order bits are discarded. For example, if a user ID is 888 888 888, which is 110 100 111 110 110 101 111 000 111 000 in binary system, the last 24 bits, that is, 111 110 110 101 111 000 111 000 are outputted and the first 6 bits 110 100 are discarded because the Wiegand26 format supports 24 bits of output content.

Appendix 3.2 Wiegand 34 Introduction

The system provides the embedded Wiegand 34-bit format.

Composition of the Wiegand 34-bit format: 2-bit parity check bits and 32-bit output content (user ID or card number). The 32-bit binary code can indicate 4 294 967 296 (0-4 294 967 295) different values.

| | | | | | |
|--|-----------------------|----------|---------------------|-----------|----------------------|
| | 1 | 2 | | 33 | 34 |
| | Even parity check bit | | User ID/Card number | | Odd parity check bit |

The following table describes the fields.

| Field | Description |
|-----------------------|--|
| Even parity check bit | The even parity check bit is determined by bits 2-17. If there is an even number of 1's, the even parity check bit is 0. If there is an odd number of 1's, the even parity check bit is 1. |
| User ID/Card number | User ID/Card number (card code, 0-4 294 967 295) and bit 2 indicates the MSB. |

[Working principle]

The master device supports the Wiegand In function and the slave device supports the Wiegand Out function. After the Wiegand output port of the slave device is connected to the Wiegand input port of the master device, Wiegand signals outputted by the slave device cannot contain the device ID and the numbers sent from the slave device to the master device must exist on the master device. That is, the user information on the slave device supporting the anti-passback function must map to the user information on the master device supporting the anti-passback function.

[Function description]

The device detects anti-passback based on the last check-in/check-out record of users. The check-in record must match the check-out record. The device supports out anti-passback, in anti-passback, and in/out anti-passback.

When **Out Anti-passback** is set for a user on the master device, the last record of the user must be a check-in record if the user needs to check in/out freely. Otherwise, the user cannot check out and the check-out request of the user is rejected because of anti-passback. For example, if the recent first record of a user is a check-in record, the second record of the user can be either a check-in or check-out record but the third record must be based on the second record, ensuring that the check-in record matches the check-out record. Note: If a user has no record, the user can only check in.

When **In Anti-passback** is set for a user on the master device, the last record of the user must be a check-out record if the user needs to check in/out freely. Otherwise, the user cannot check in and the check-in request of the user is rejected because of anti-passback. Note: If a user has no record, the user can only check out.

When **In/Out Anti-passback** is set for a user on the master device, if the last record of the user is a check-out or check-in record, the next record of the user must be a check-in or check-out record for the user to check in/out freely. That is, the check-in record must match the check-out record.

[Operation description]

(1) Model selection

Master device: devices supporting the Wiegand In function, except the F10 reader

Slave device: devices supporting the Wiegand Out function

(2) Menu settings

➤ **Anti-Passback Direction**

The options of **Anti-Passback Direction** include **In/Out Anti-passback**, **Out Anti-passback**, **In Anti-passback**, and **No Anti-passback**.

Out Anti-passback: After a user checks out, only if the last record is a check-in record can the user check out again.

In Anti-passback: After a user checks in, only if the last record is a check-out record can the user check in again.

➤ **Device Status**

The options of **Device Status** include **None**, **Out**, and **In**.

None: To disable the Anti-Passback function.

Out: All records on the device are check-out records.

In: All records on the device are check-in records

(3) Modifying the Wiegand output format for the device

When two devices communicate with each other, only Wiegand signals that do not contain the device ID are acceptable. You can choose **Comm. > Wiegand Setup** from the main menu or access the software and choose **Basic Setting > Device Management > Wiegand** and set **Defined Format** to **Wiegand26-bits** or **Wiegand26 without device ID**.

(4) User registration

User IDs must exist on both the master and slave devices and the user IDs must be consistent. Therefore, users need to be registered on both the master and slave devices.

(5) Wiring description

The master and slave devices communicate with each other over Wiegand and the wiring is as follows:

| Master device | | Slave device |
|---------------|---------|--------------|
| IWD0 | <-----> | WD0 |
| IWD1 | <-----> | WD1 |
| GND | <-----> | GND |

Appendix 5 Statement on Human Rights and Privacy

Dear Customers:

Thank you for choosing the hybrid biometric products designed and manufactured by us. As a world-renowned provider of biometric technologies and services, we pay much attention to the compliance with the laws related to human rights and privacy in every country while constantly performing research and development.

We hereby make the following statements:

1. All of our fingerprint recognition devices for civil use only collect the characteristic points of fingerprints instead of the fingerprint images, and therefore no privacy issues are involved.
2. The characteristic points of fingerprints collected by our products cannot be used to restore the original fingerprint images, and therefore no privacy issues are involved.
3. We, as the equipment provider, shall not be held legally accountable, directly or indirectly, for any consequences arising due to the use of our products.
4. For any dispute involving the human rights or privacy when using our products, please contact your employer directly.

Our fingerprint products for police use, or development tools support the collection of the original fingerprint images. As for whether such a type of fingerprint collection constitutes an infringement of your privacy, please contact the government or the final equipment provider. We, as the original equipment manufacturer, shall not be held legally accountable for any infringement arising thereof.

The law of the People's Republic of China has the following regulations regarding the personal freedom:

1. Unlawful arrest, detention or search of citizens of the People's Republic of China is prohibited; infringement of individual privacy is prohibited.
2. The personal dignity of citizens of the People's Republic of China is inviolable.
3. The home of citizens of the People's Republic of China is inviolable.
4. The freedom and privacy of correspondence of citizens of the People's Republic of China are protected by law.

At last we stress once again that biometrics, as an advanced recognition technology, will be applied in a lot of sectors including e-commerce, banking, insurance and legal affairs. Every year people around the globe suffer from great loss due to the insecurity of passwords. The biometric products actually provide adequate protection for your identity under a high security environment.

Appendix 6 Environment-Friendly Use Description



- The Environment Friendly Use Period (EFUP) marked on this product refers to the safety period of time in which the product is used under the conditions specified in the product instructions without leakage of noxious and harmful substances.
- The EFUP of this product does not cover the consumable parts that need to be replaced on a regular basis such as batteries and so on. The EFUP of batteries is 5 years.

Names and Concentration of Toxic and Hazardous Substances or Elements

| Parts Name | Toxic and Hazardous Substances or Elements | | | | | |
|----------------|--|----|----|------|-----|------|
| | Pb | Hg | Cd | Cr6+ | PBB | PBDE |
| Chip resistor | × | ○ | ○ | ○ | ○ | ○ |
| Chip capacitor | × | ○ | ○ | ○ | ○ | ○ |
| Chip inductor | × | ○ | ○ | ○ | ○ | ○ |
| Chip diode | × | ○ | ○ | ○ | ○ | ○ |
| ESD components | × | ○ | ○ | ○ | ○ | ○ |
| Buzzer | × | ○ | ○ | ○ | ○ | ○ |
| Adapter | × | ○ | ○ | ○ | ○ | ○ |
| Screws | ○ | ○ | ○ | × | ○ | ○ |

○: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363-2006.

×: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006.

Note: 80% of the parts in this product are manufactured with non-hazardous environment-friendly materials. The hazardous substances or elements contained cannot be replaced with environment-friendly materials at present due to technical or economical constraints.

Green Label

ZK Building, Wuhe Road, Gangtou, Bantian, Buji Town,
Longgang District, Shenzhen China 518129

Tel: +86 755-89602345

Fax: +86 755-89602394

www.zkteco.com

